Modu-licious #5

DESIGNED IN 1999

ASSEMBLY NOTES | REV 00






YOU WANT CHOICES, WE GOT CHOICES.

Drawers and doors are your canvas with the award-winning Modu-licious series.


NEED A HAND?

Contact us at **service@bludot.com** or **844.425.8368** for assistance.


Parts & Hardware

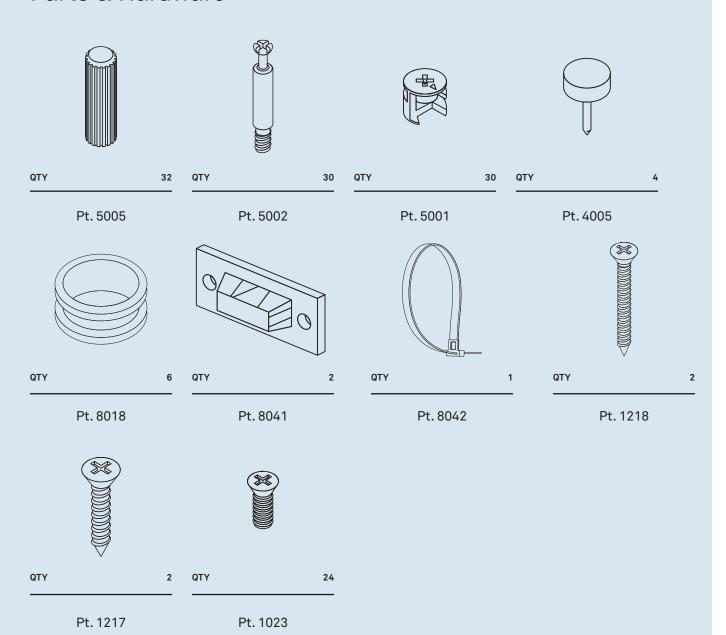



Parts & Hardware

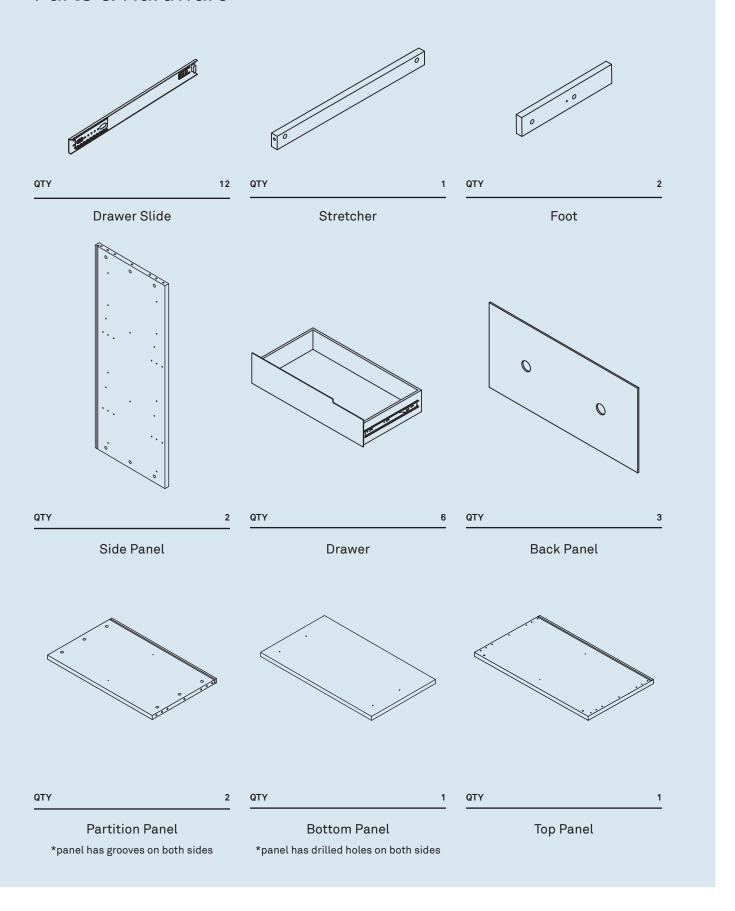


How to use the cam lock system

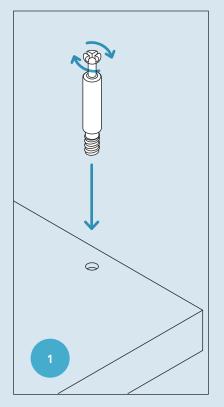

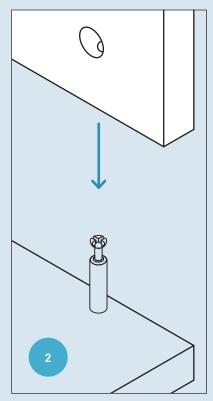


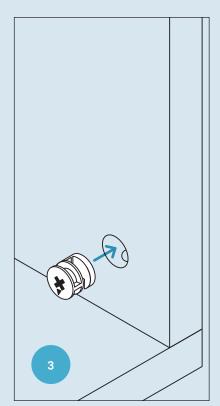

 




Turn cam clockwise 1/2 turn or until tight.

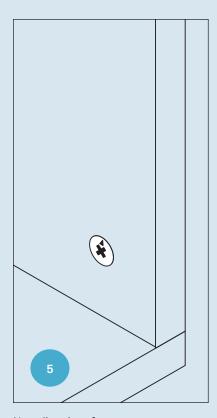

Note direction of cam arrow.


ASSEMBLE BASE.

Using the stretcher and feet assemble the base as shown. Refer to page 3 on how to use the cam lock system.

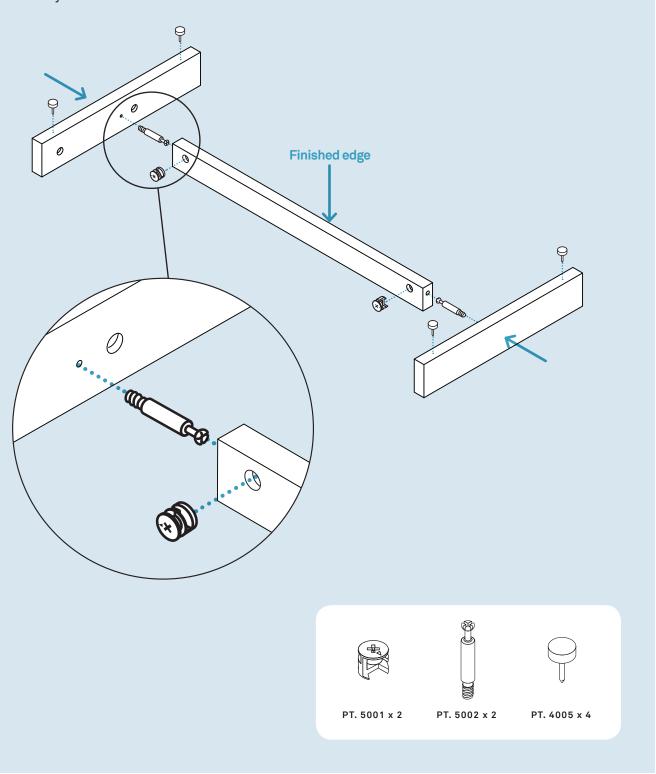


ATTACH BOTTOM PANEL.

Attach the bottom panel to the base using the provided hardware as shown. Refer to page 3 on how to use the cam lock system.

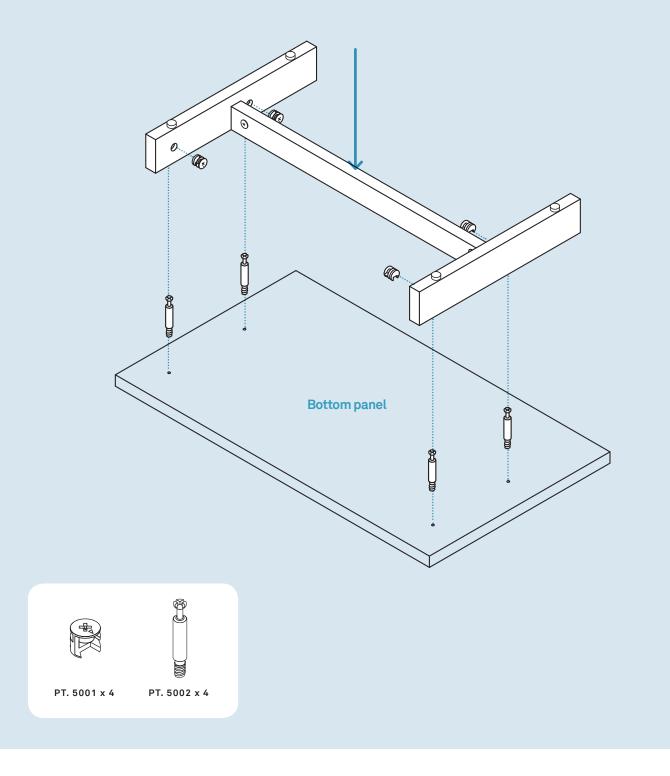


ATTACH DRAWER SLIDES.

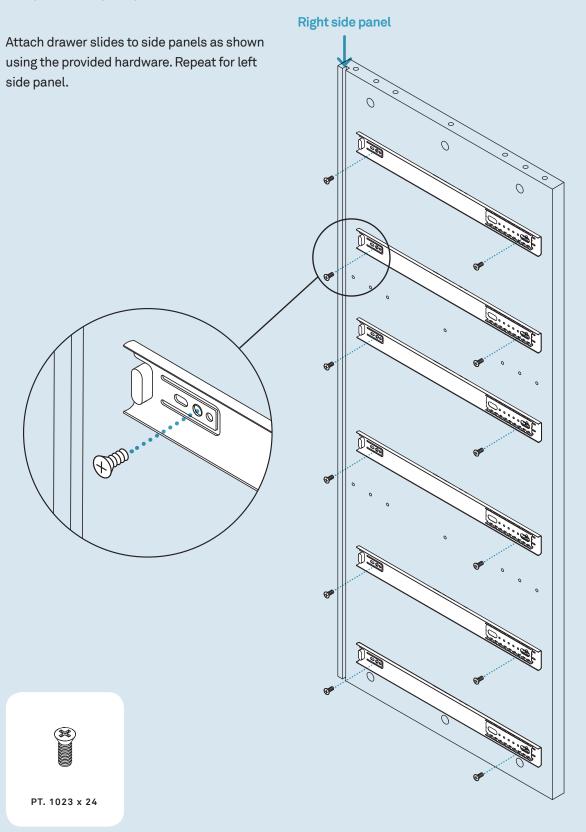


BEGIN ASSEMBLING CASE.

Attach partition panels to left side panel as shown using the provided hardware. Be sure to align grooves on partition panels and side panel. Refer to page 3 on how to use the cam lock system.

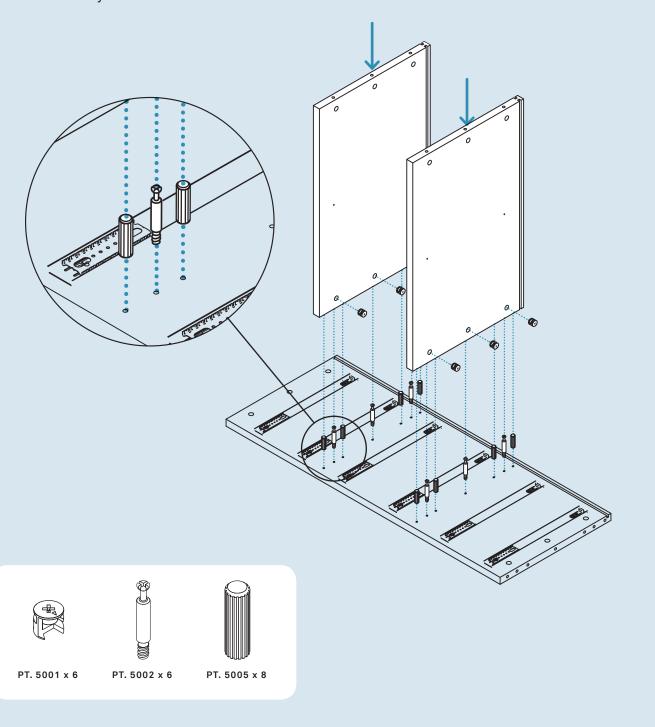


ATTACH RIGHT SIDE PANEL.

Slide back panel into place as shown. Attach right side panel as shown using the provided hardware. Refer to page 3 on how to use the cam lock system.

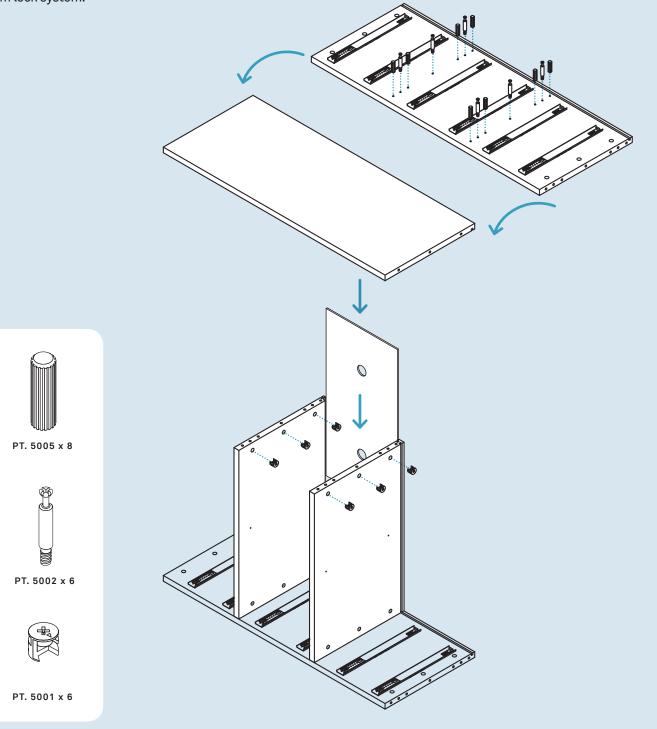

INSERT REMAINING BACK PANELS.

Add rubber grommets to each back panel as shown. Insert back panels into grooves in case.

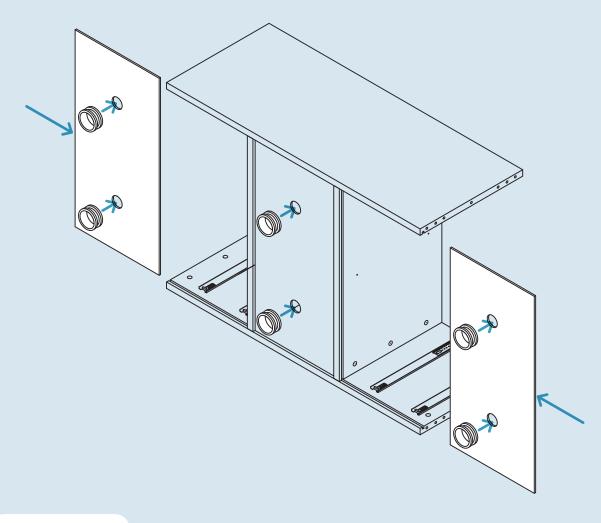





9 | 8 4 4 . 4 2 5 . 8 3 6 8 M O D U - L I C I O U S # 5


FINISH ASSEMBLING CASE.


Finish assembling the case by attaching the top and bottom panels as shown using the provided hardware. Refer to page 3 on how to use the cam lock system.

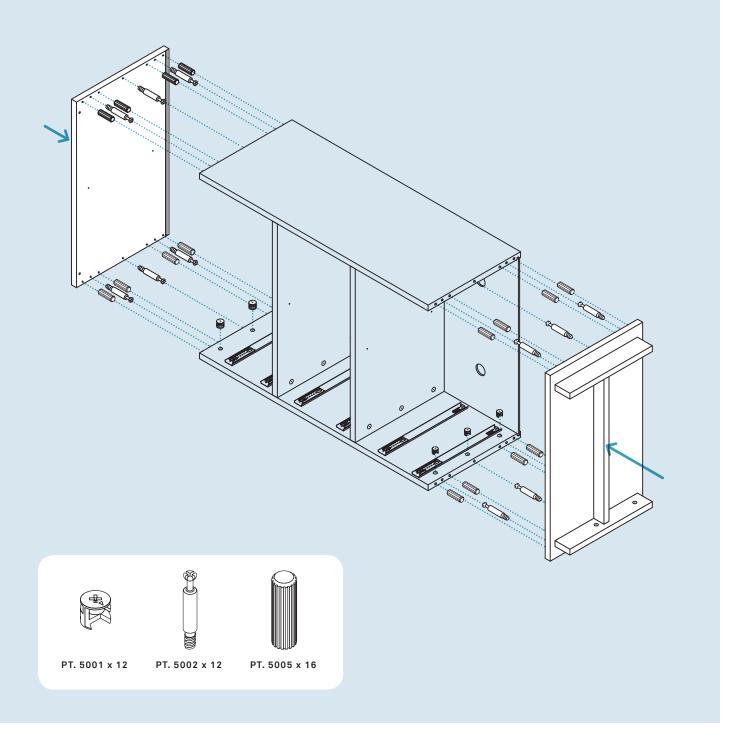

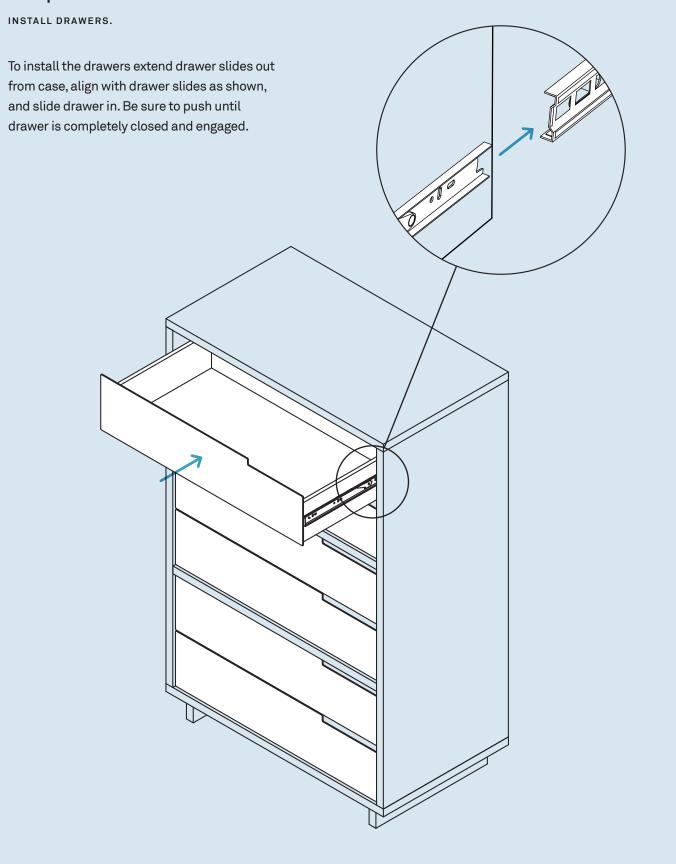


11 | 8 4 4 . 4 2 5 . 8 3 6 8 M O D U - L I C I O U S # 5

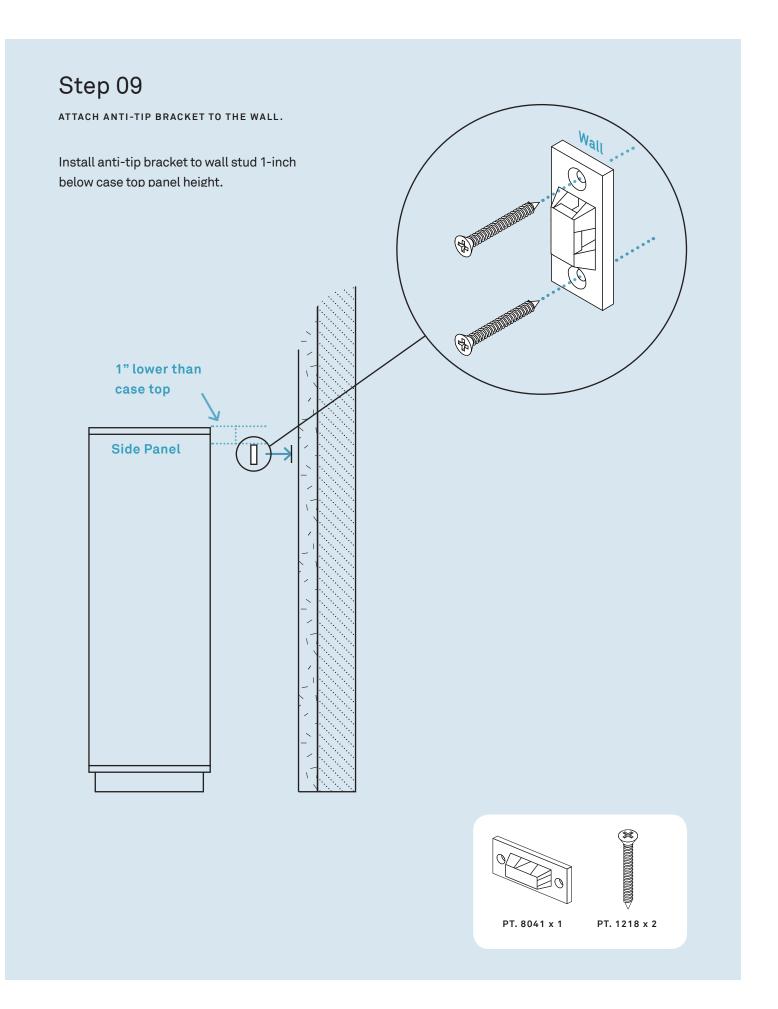


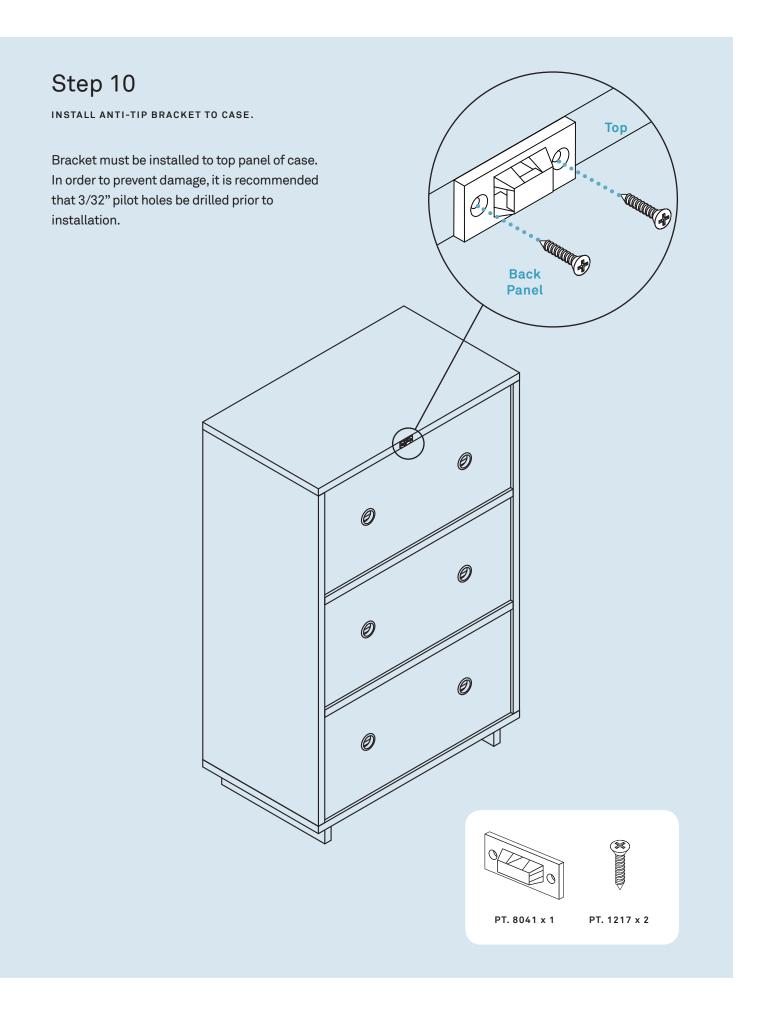

13 | 8 4 4 . 4 2 5 . 8 3 6 8 M O D U - LICIO U S # 5

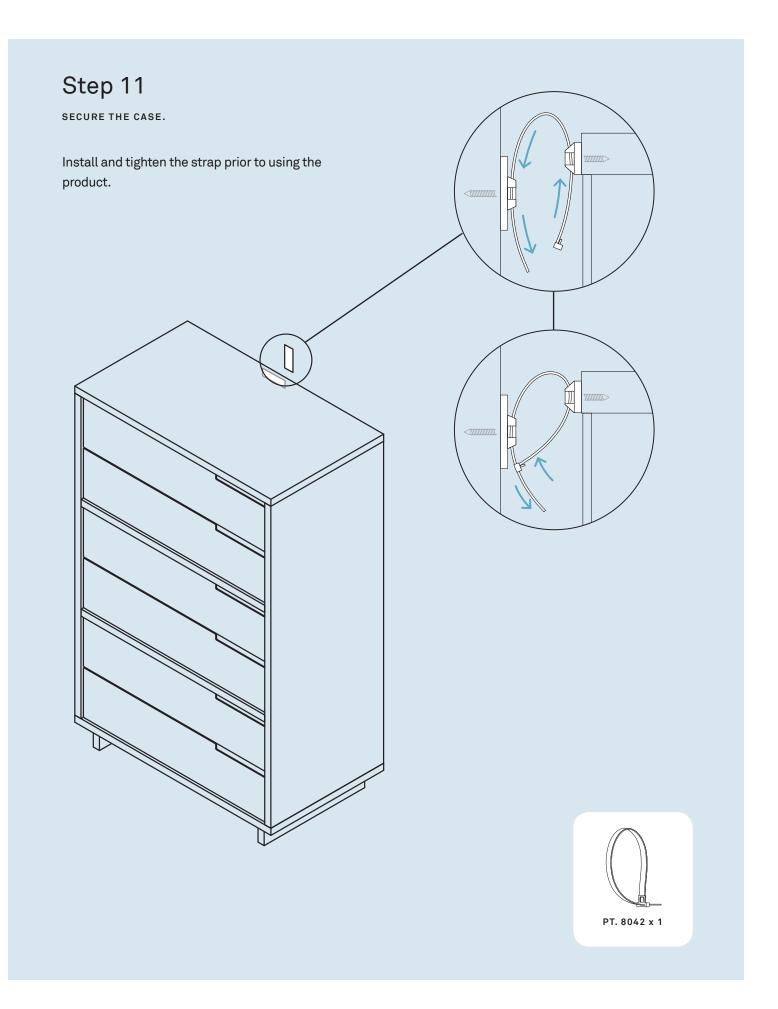


Additional Information

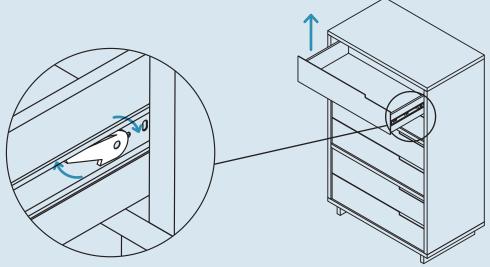

TO REMOVE DRAWERS

Pull lever up on the right side and push down on the left side of the drawer slide. With levers engaged pull drawer out.

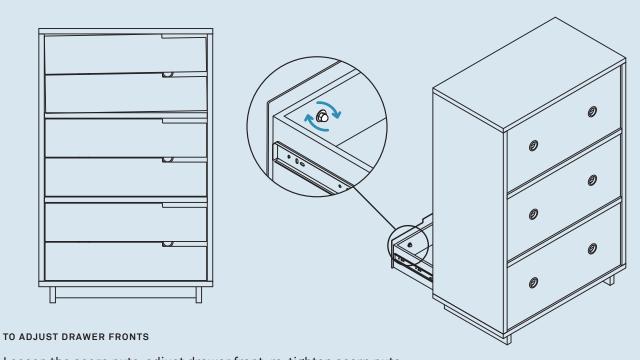

Loosen the acorn nuts, adjust drawer front, re-tighten acorn nuts.

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulate for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

