


BLU  
DOT

# FREE-RANGE

SIDE TABLE

ASSEMBLY NOTES

100% BRASS FED  
(GET IT? THE HARDWARE  
IS BRASS!)

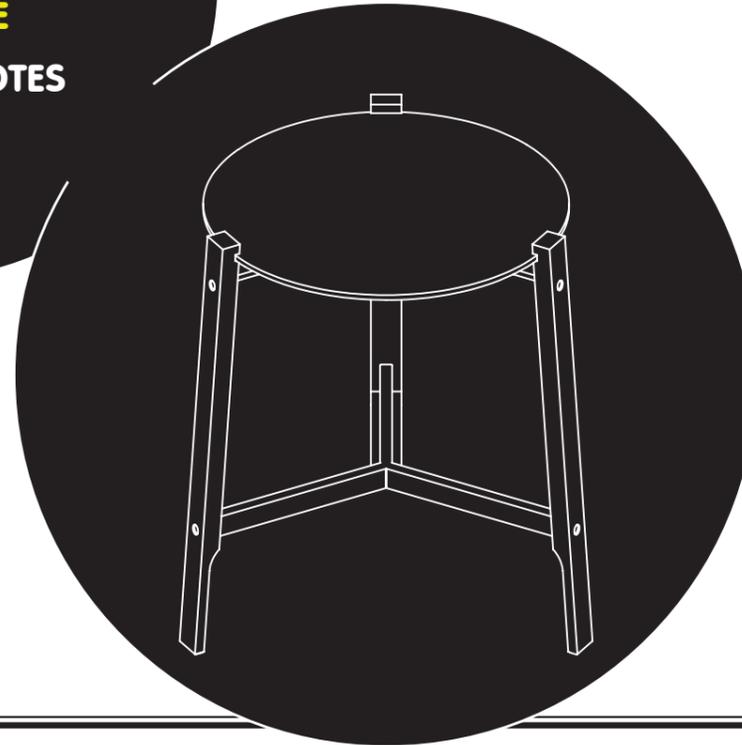


## CARE

Clean with a soft cloth or sponge using a mild detergent such as dish soap. On legs, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth.


Natural stone top will have variances in appearance and each piece is unique.

## PARTS


x1

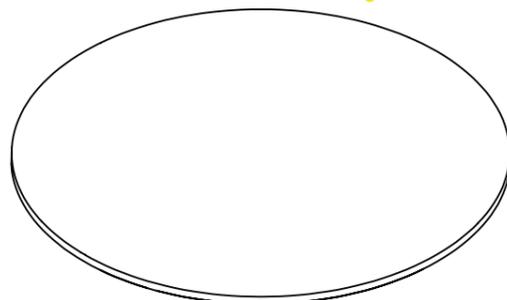


x1

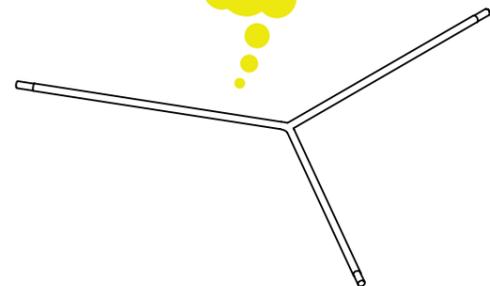

x1

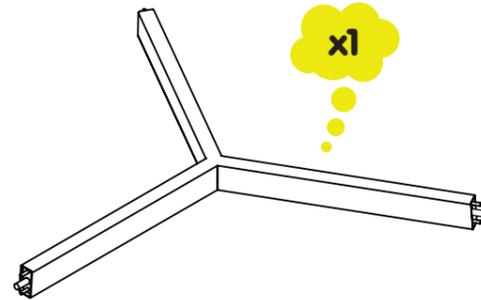

x3




## HARDWARE



x1  
9004



x6  
5017

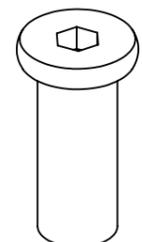


**1**  
Assemble  
on carpet or  
protective mat.

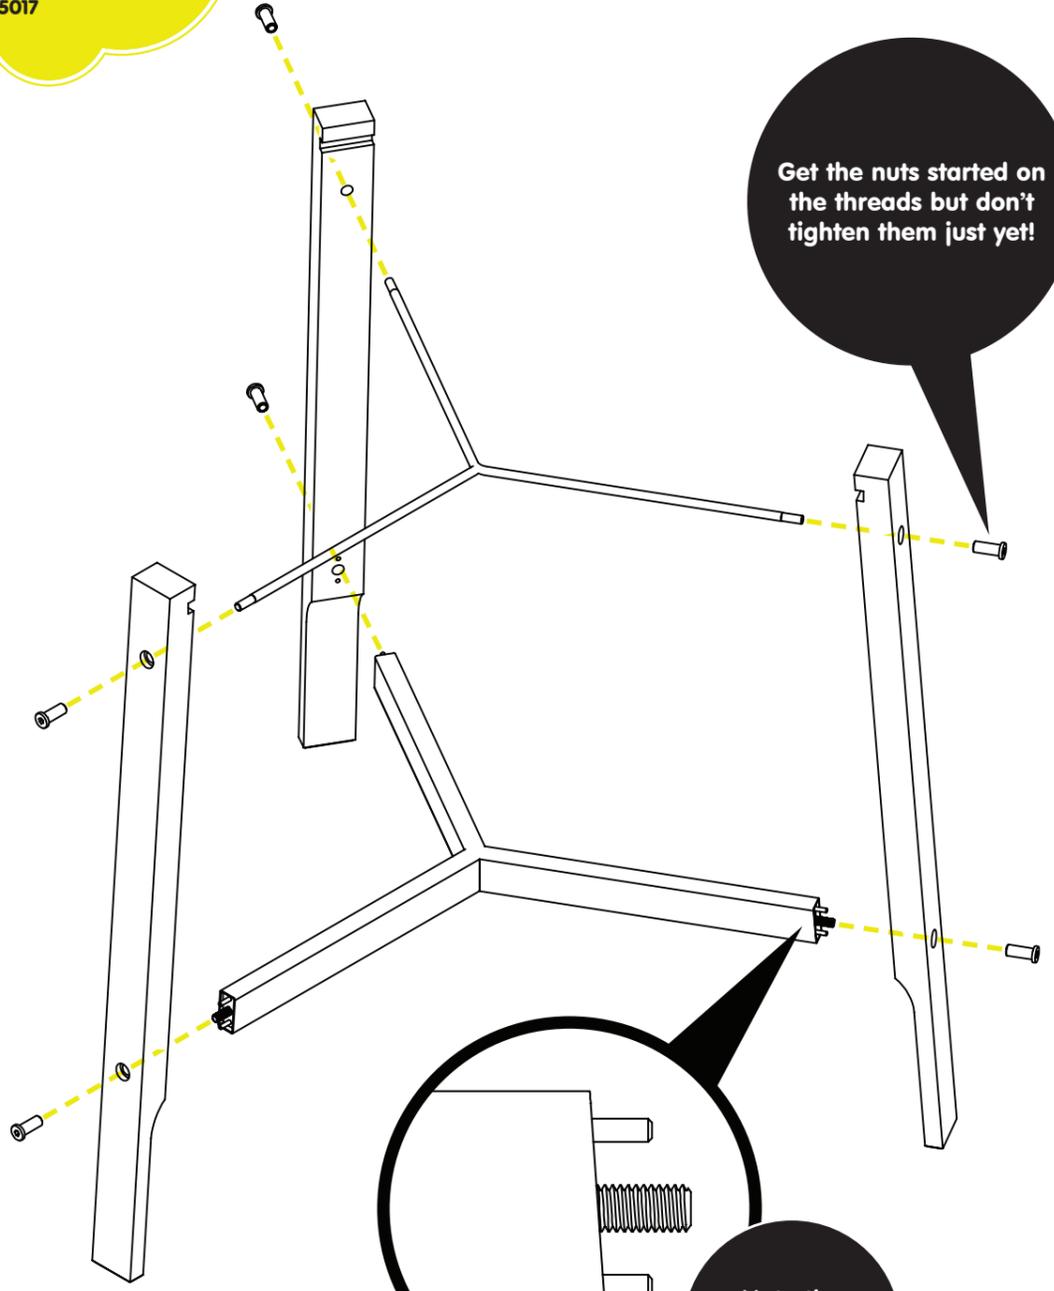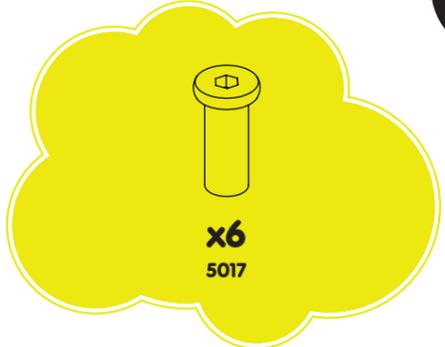



Get the nuts started on  
the threads but don't  
tighten them just yet!

Note the  
orientation of  
the angle.

**2**  
Place the top bottomsides  
facing up on a large,  
full-color design book or  
similar object to elevate it  
an inch or so off the floor.

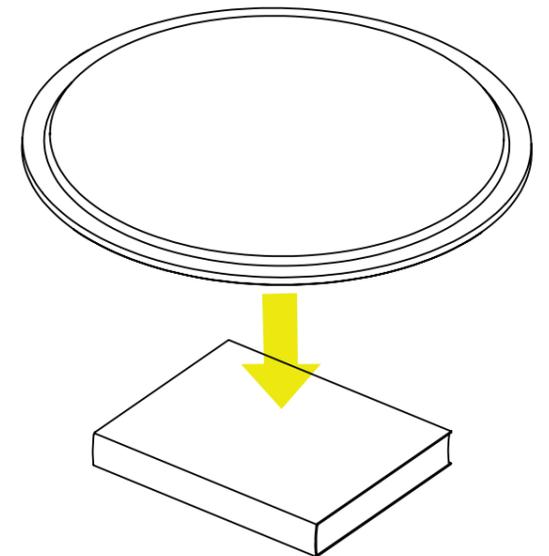


**3**  
Lower the base onto  
the top and position  
the slots in the legs  
onto the edge of the  
top.

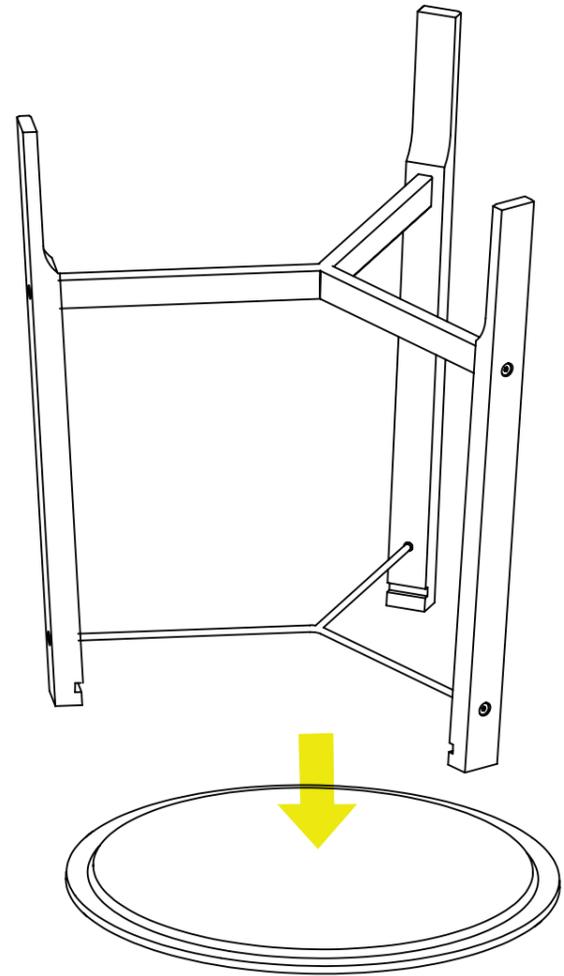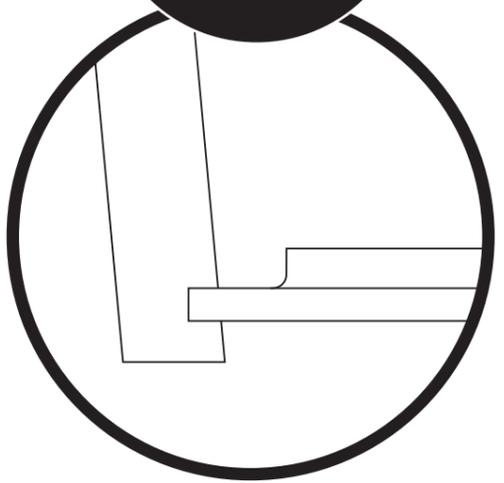


4

Grab the supplied  
hex wrench.

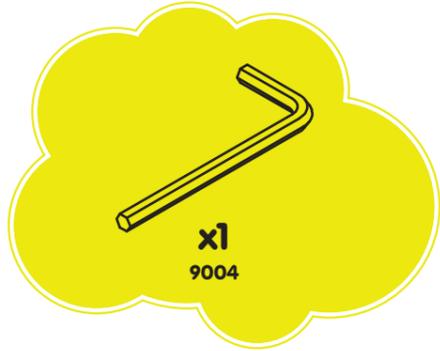

Tighten these first. To  
ensure that the top is  
centered, tighten each  
fastener one turn at a  
time while working your  
way around the table.

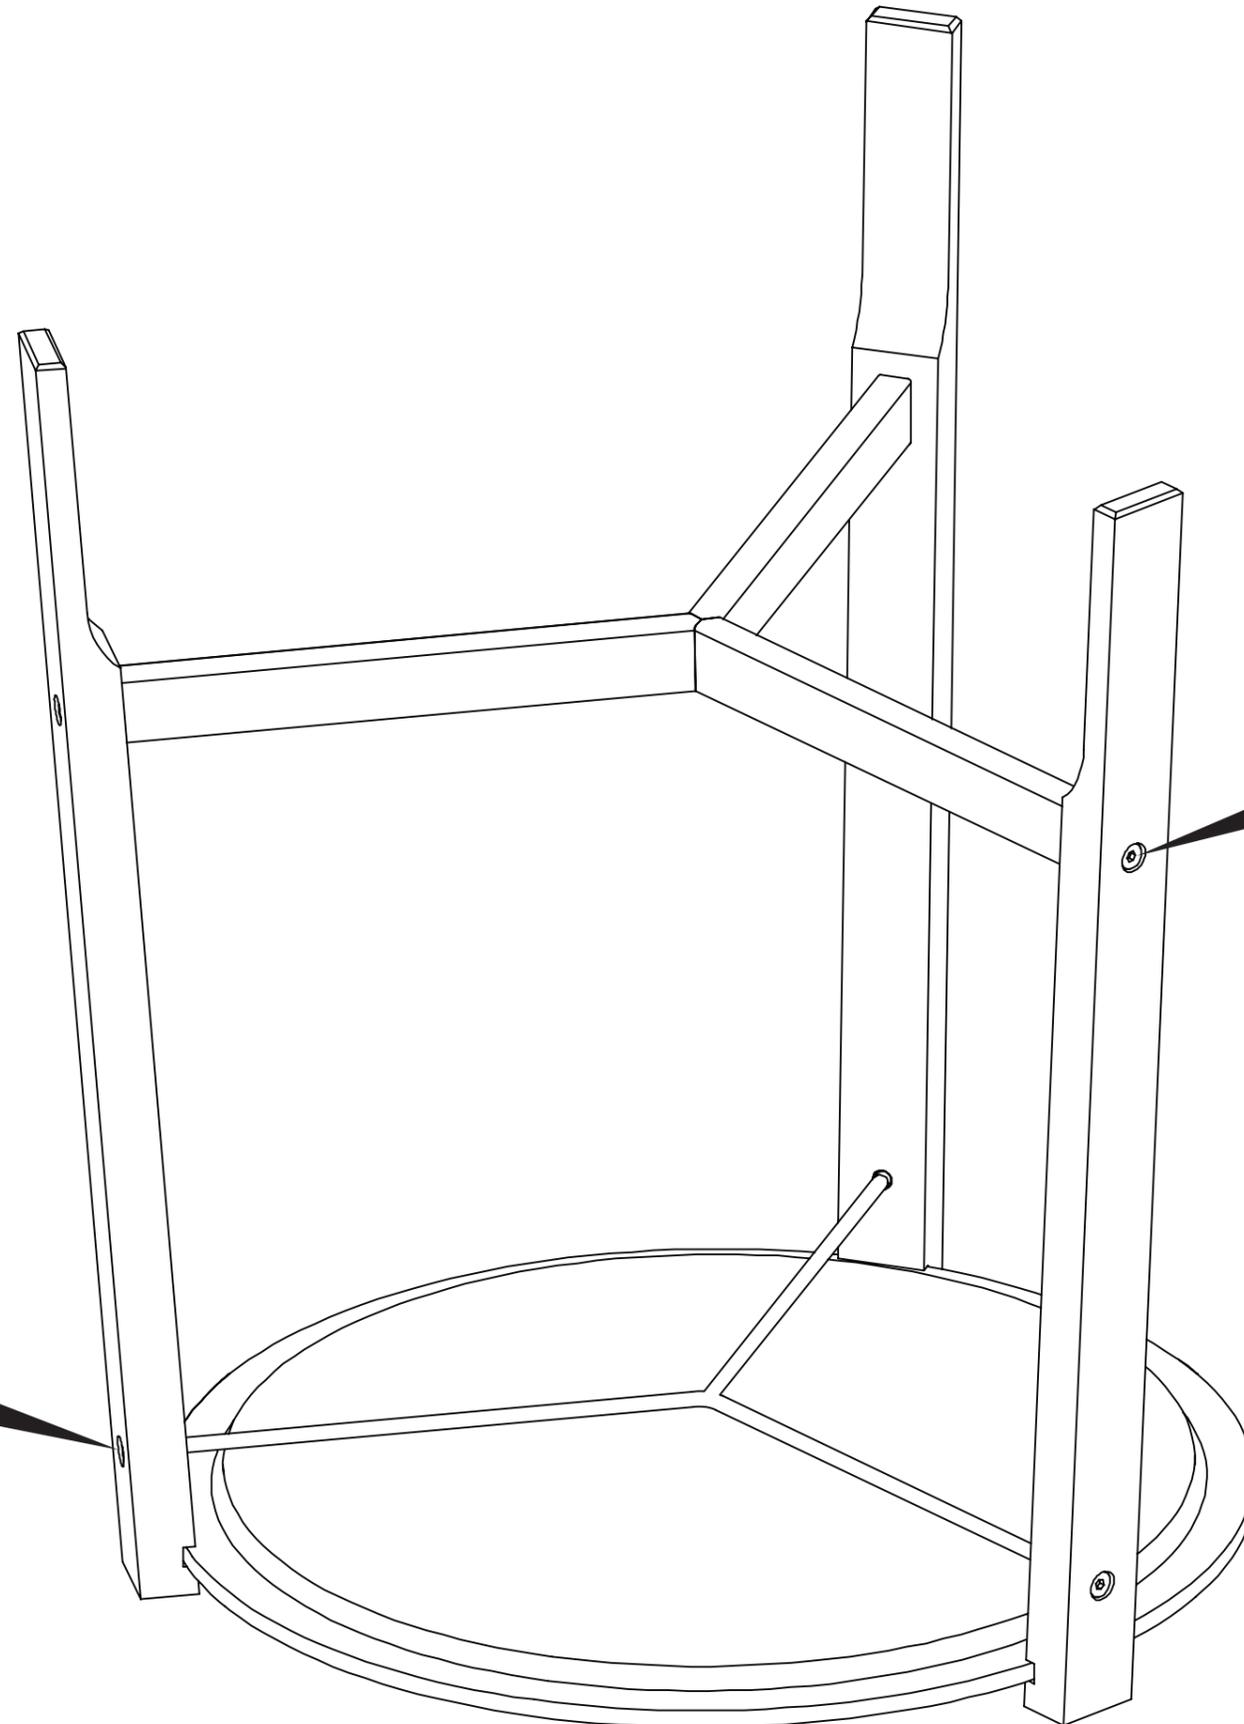

Tighten these  
fasteners last.