
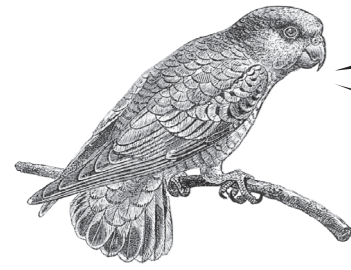


BLU
DOT

LAST CHANCE

ASSEMBLY NOTES

LOOK AT THE VIEW

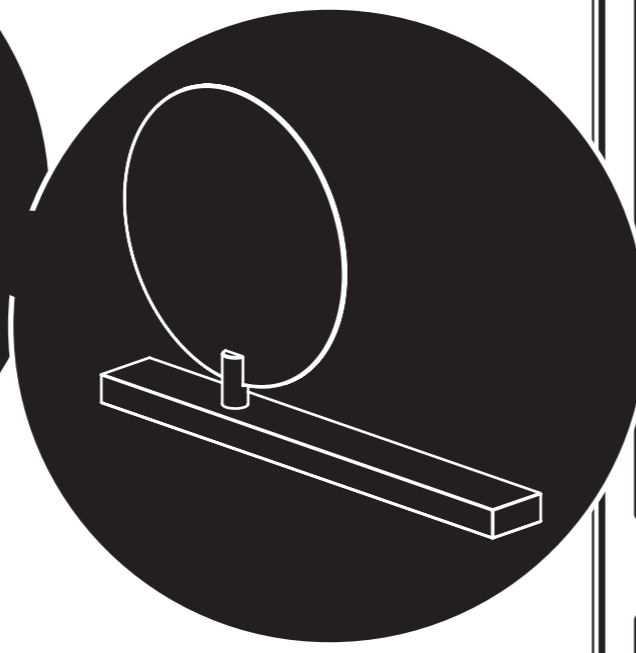

CARE
Clean wood with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

PARTS & HARDWARE

- x2 1215 (Screws)
- x2 8017 (Washers)
- x1 MIRROR BRACKET
- x1 MIRROR
- x1 SHELF
- x1 WALL BRACKET
- x3 1066 (Screws)

1

x2 1215

Install wall bracket and insert shelf into pins, then secure shelf with screws.

To determine the hardware best suited for your type of wall, consult your local hardware professional.

Make sure wall cleat is horizontal with a wall level.

2

Attach mirror to mirror bracket with 2 bolts. Be sure to use plastic spacers to align mirror with bracket. Tighten firmly, but do not over-tighten. Secure mirror assembly to shelf with bolt.

x2 8017 (Washers)

x3 1066 (Screws)