


Me Time Bed - King, Queen, Full

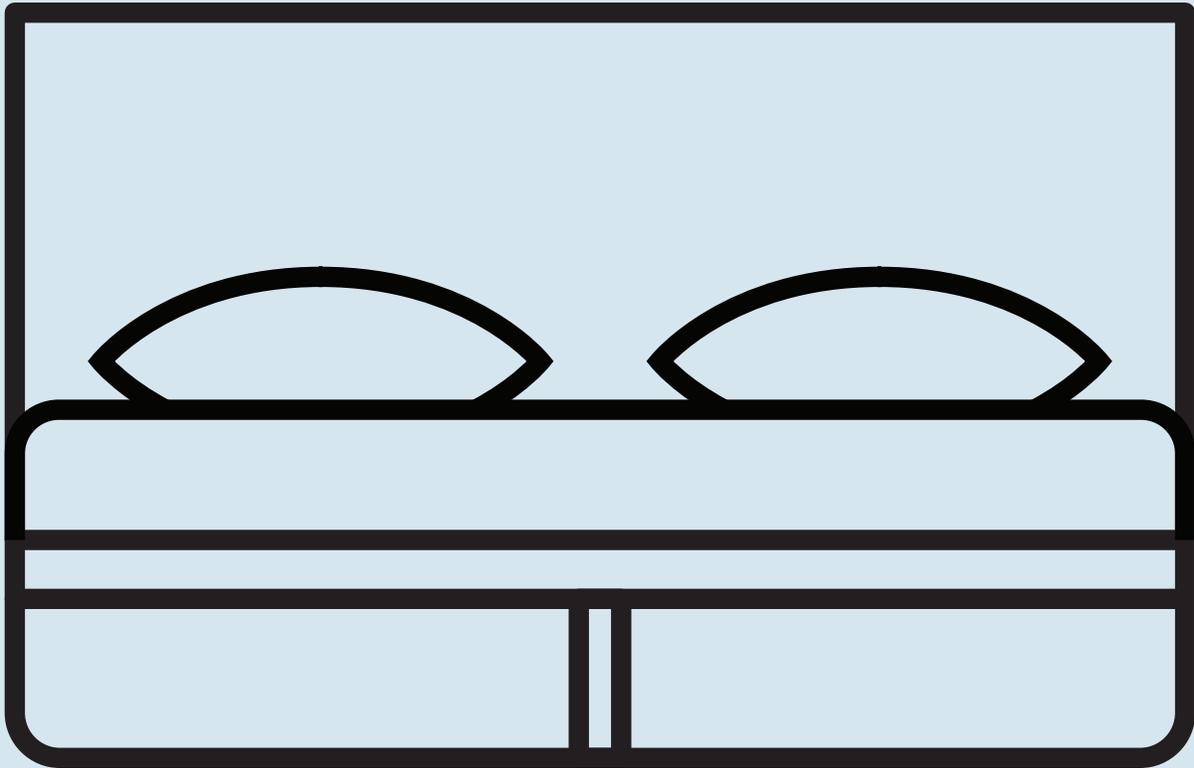

DESIGNED IN 2016

ASSEMBLY NOTES | REV 00



IT IS A DISASTER OUT THERE. WAIT IT OUT HERE.

This tightly tuned bed design is the perfect spot to stay put. Me time. You time. There will be better times .

NEED A HAND?


Contact us at service@bludot.com or **844.425.8368** for assistance.

Parts & Hardware




QTY 14

PT. 1680




QTY 4

PT. 1030




QTY 18

PT. 3005




QTY 18

PT. 3007

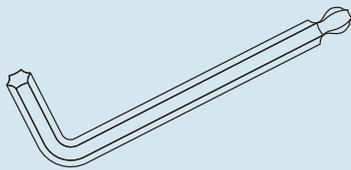


QTY 1

PT. 9017



QTY 1

Center Leg

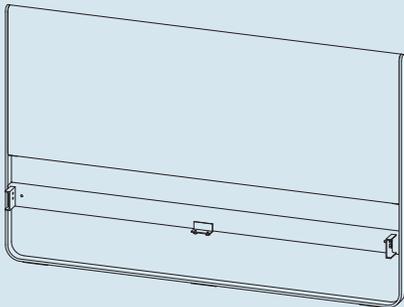


QTY 1

Head Board




QTY 1

Foot Board

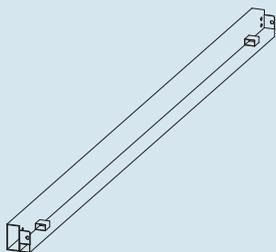

QTY 2

Side Rail

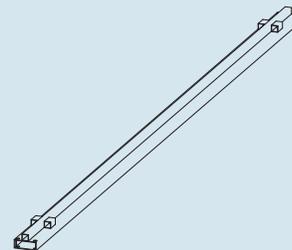


QTY 1

Center Rail

Step 01

BEGIN ASSEMBLING BED.


Align side rails with headboard brackets. Once aligned, slide side rails onto brackets and attach using the provided hardware as shown.

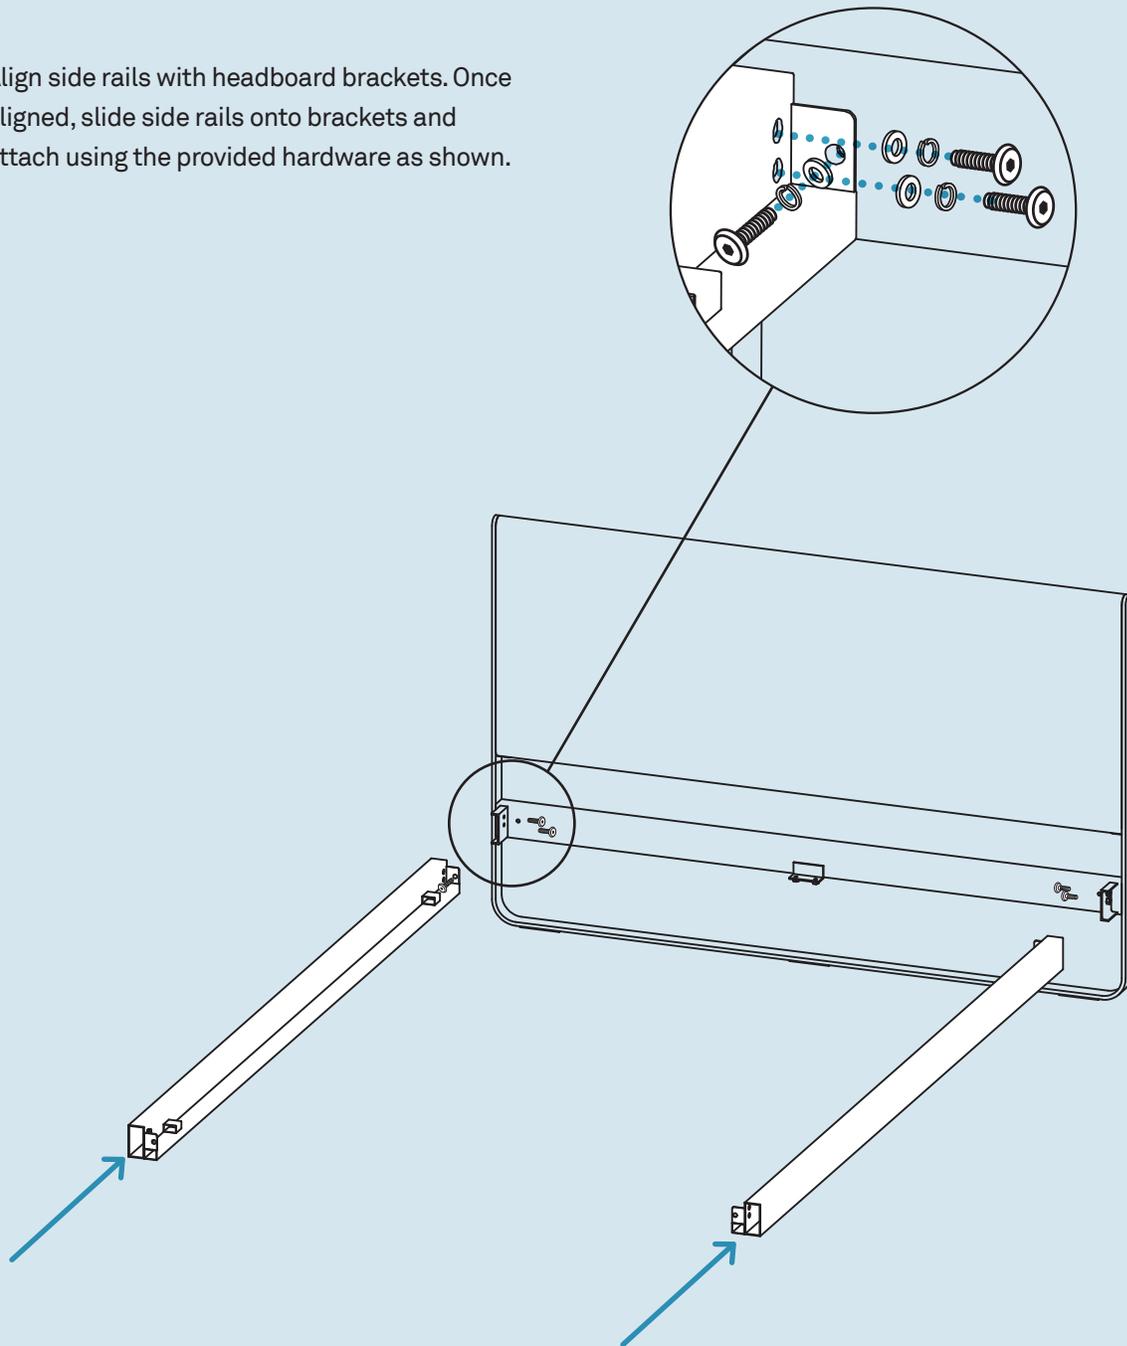

PT. 1680 x 6



PT. 3005 x 6



PT. 3007 x 6




PT. 9017 x 1

Step 02

ATTACHING THE FOOTBOARD.


Align side rails with footboard brackets. Once aligned, slide side rails onto brackets and attach using the provided hardware as shown.

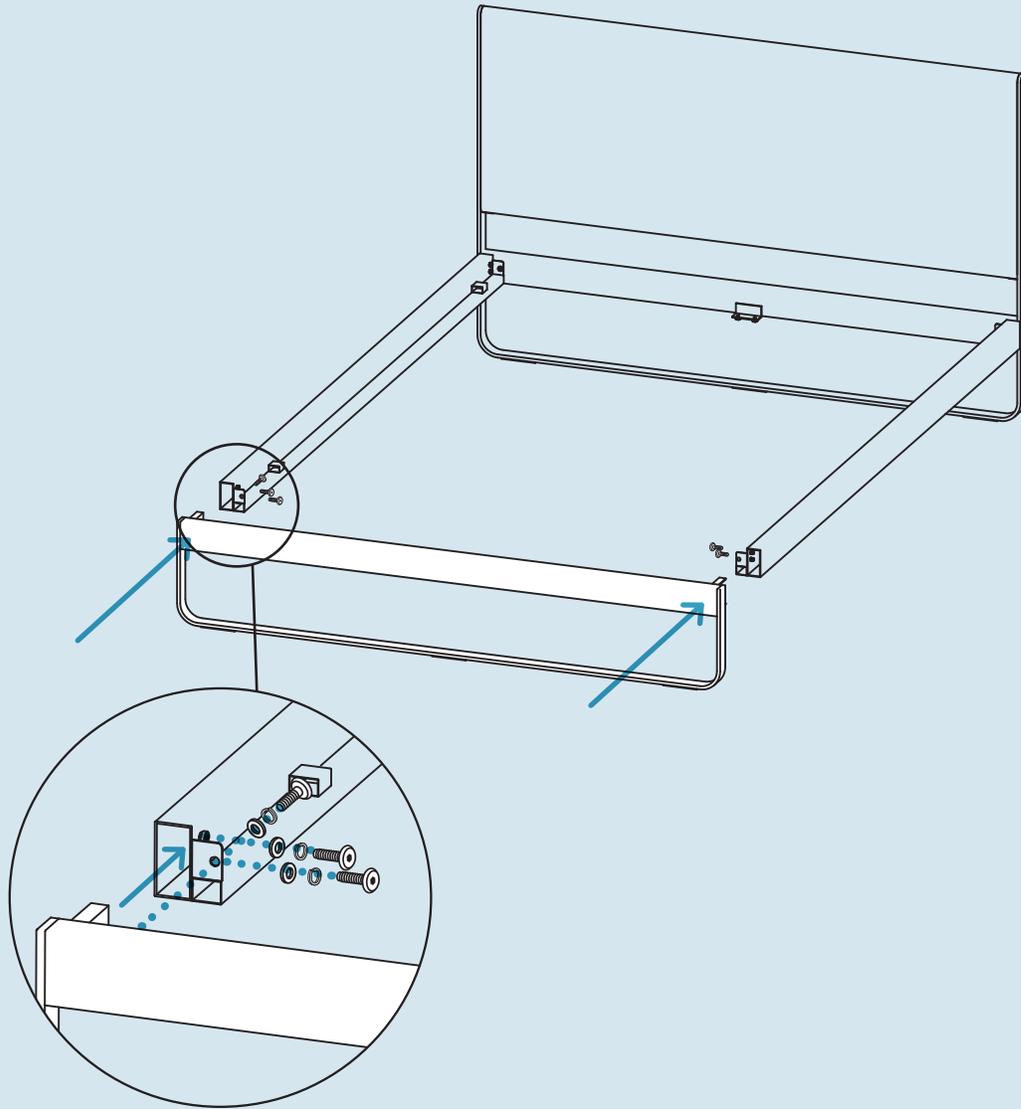

PT. 1680 x 6



PT. 3005 x 6



PT. 3007 x 6




PT. 9017 x 1

Step 03

INSTALLING THE CENTER LEG.

Place center rail upside down on soft surface.
Install center leg as shown using the provided hardware.

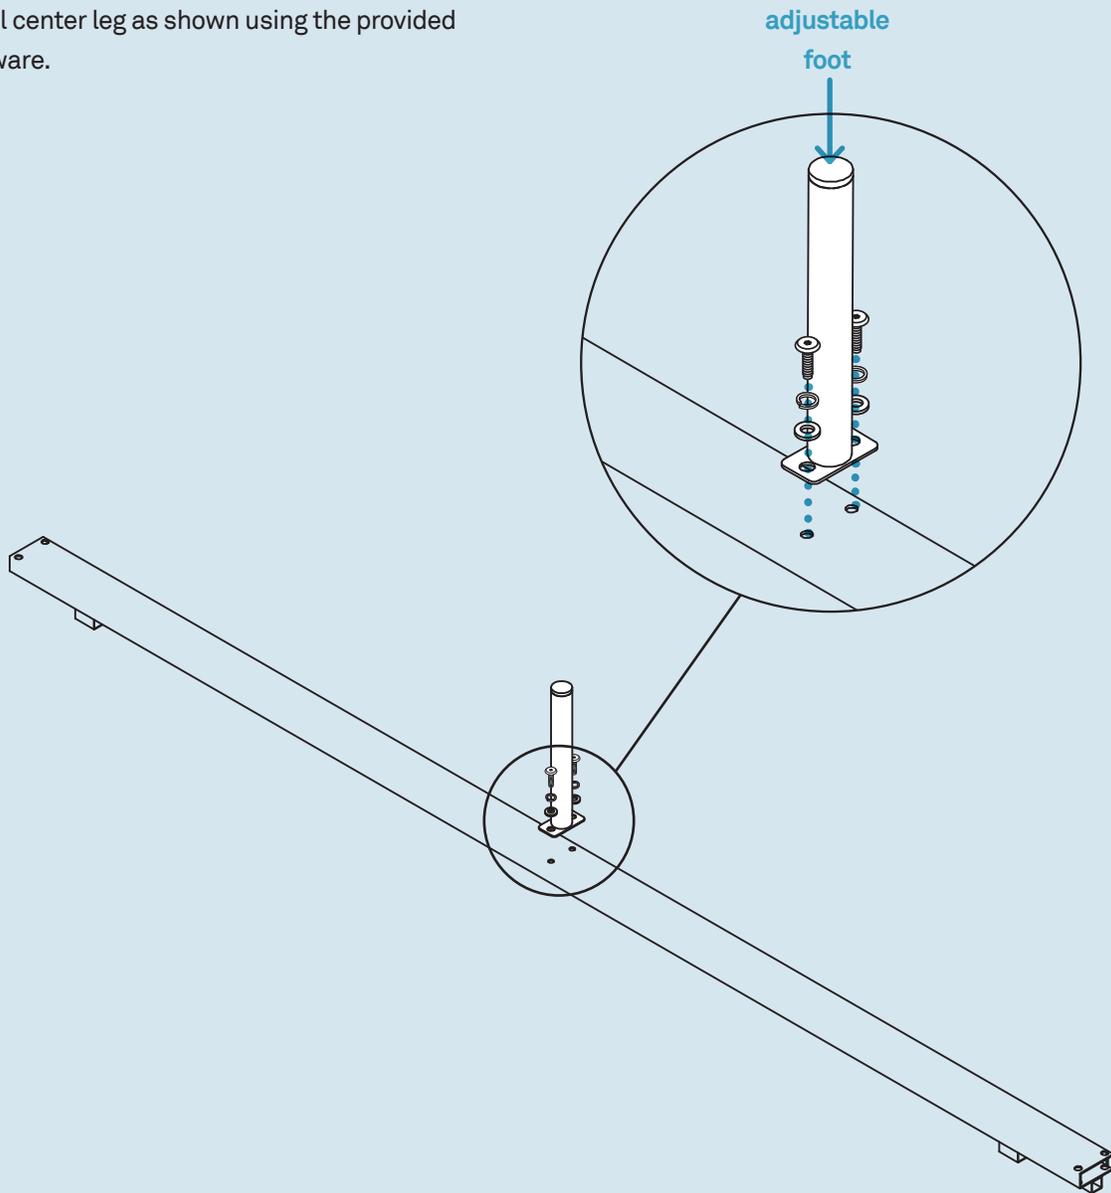

PT. 1680 x 2



PT. 3005 x 2



PT. 3007 x 2




PT. 9017 x 1

Step 04

ATTACHING THE CENTER RAIL.


Align center rail with head and footboard brackets. Attach using the provided hardware as shown.

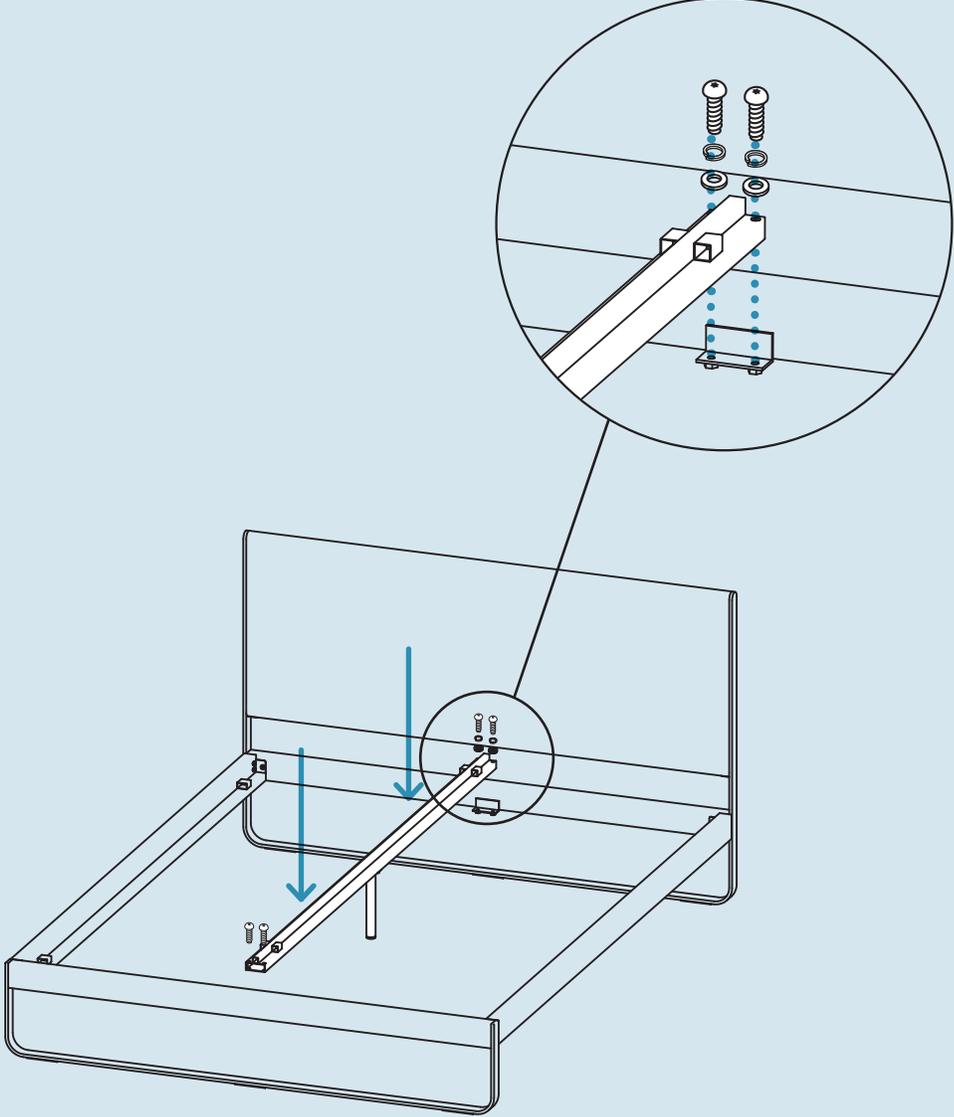

PT. 1030 x 4



PT. 3005 x 4



PT. 3007 x 4






PT. 9017 x 1

Step 05

INSTALLING THE SLATS.

Install slats as shown. Note slat anchor block locations on side rails.

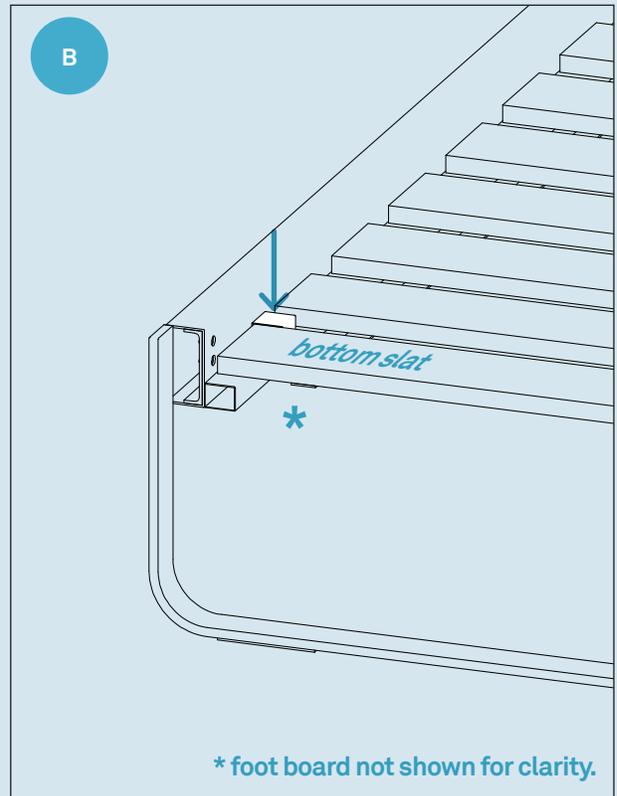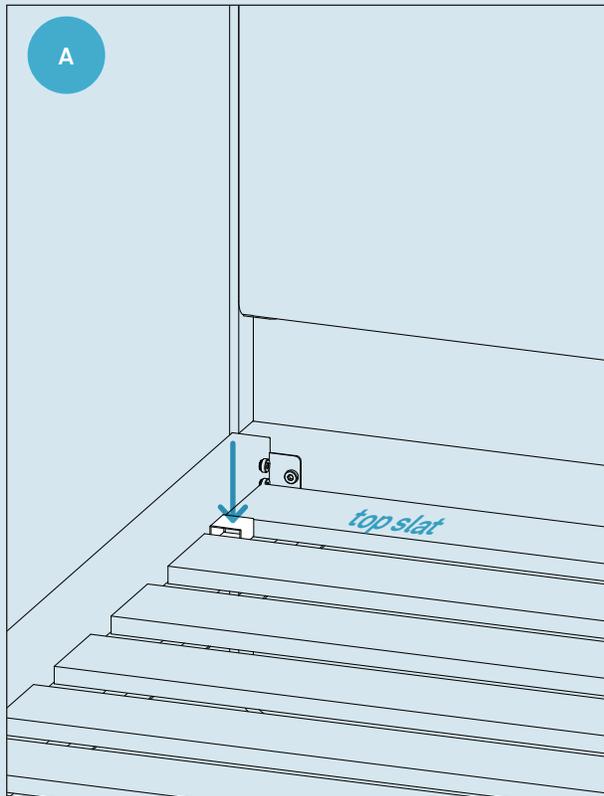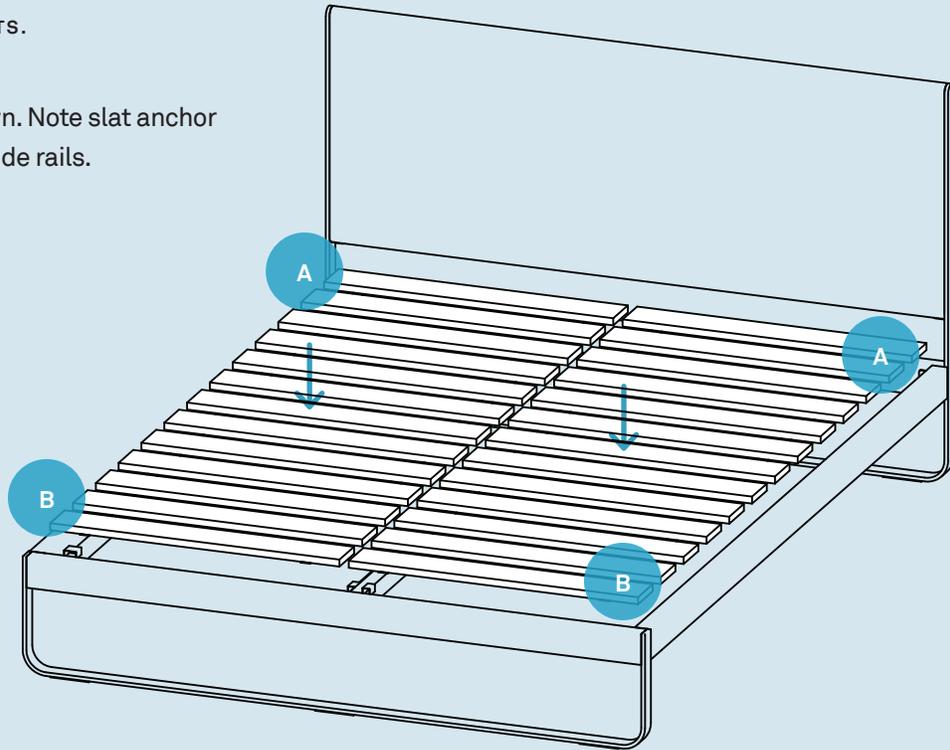

Additional Information

CLEAN

Vacuum your upholstery regularly. For leather furniture dust regularly with a dry cloth.

SPILLS

Act quickly with spills. Absorb the spill with a clean white cloth or paper towel. Never rub the surface. Do not use water or other liquids to clean, as they may cause stains. Consult a commercial cleaning specialist for removal of stubborn stains.

AVOID

Keep furniture out of direct sunlight and away from heat sources; excessive exposure to sunlight may cause color fading. Avoid placing heavy or sharp objects on the furniture surface for long periods of time; this can cause permanent surface indentations. For snags in the fabric, tuck loose threads into fabric or carefully push to reverse side. Never pull out or cut off loose threads.

