


# Bank Collection

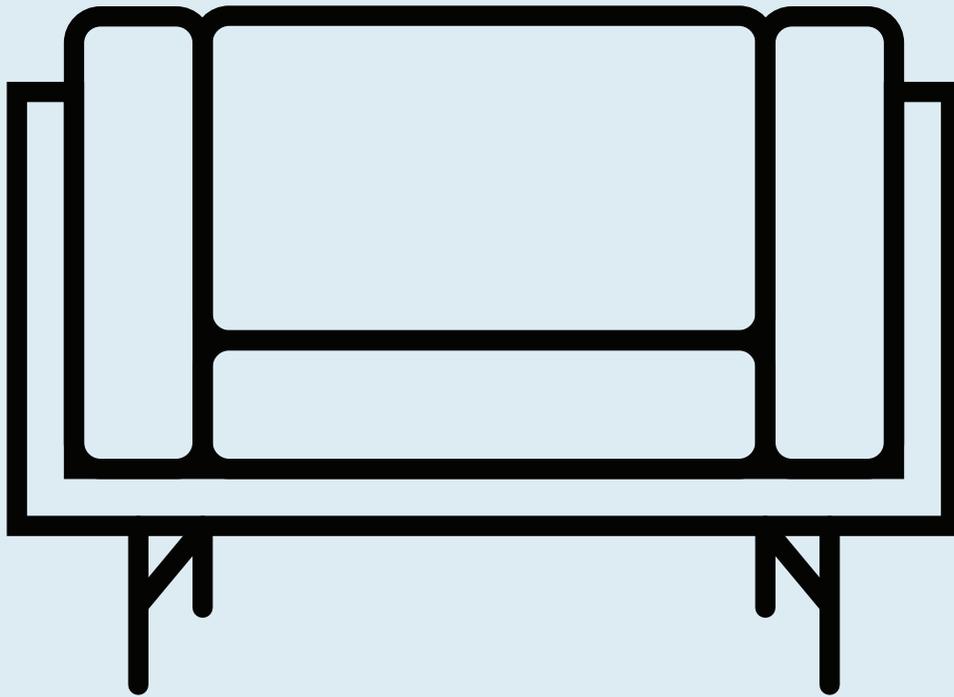

DESIGNED IN 2013

ASSEMBLY NOTES | REV 01




DEPOSIT YOUR REAR HERE.

Stately proportions, piped cushions and a generous seat depth will have you holding court.

NEED A HAND?

Contact us at [service@bludot.com](mailto:service@bludot.com) or **844.425.8368** for assistance.


# Parts & Hardware



QTY

8

Pt. 3007

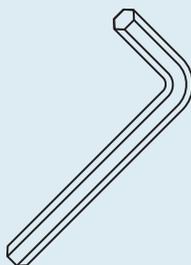

QTY

1


Pt. 9002



QTY

8


Pt. 1103

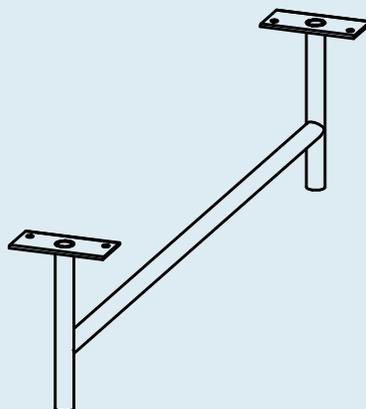

QTY

2

Legs

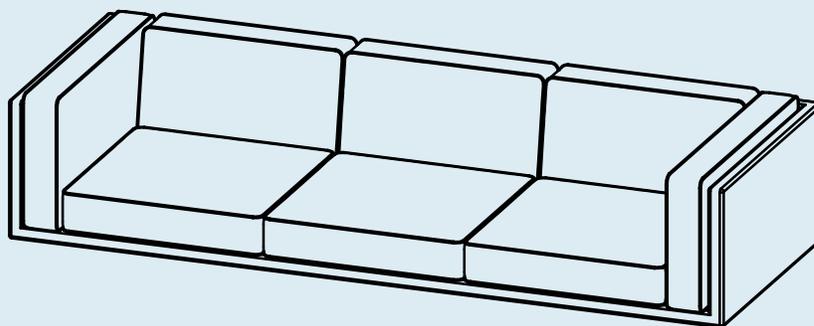

QTY


1

Sofa

# Step 01


## ATTACH THE LEGS.

Locate the threaded inserts on the bottom of the sofa and attach legs with the provided hardware as shown.

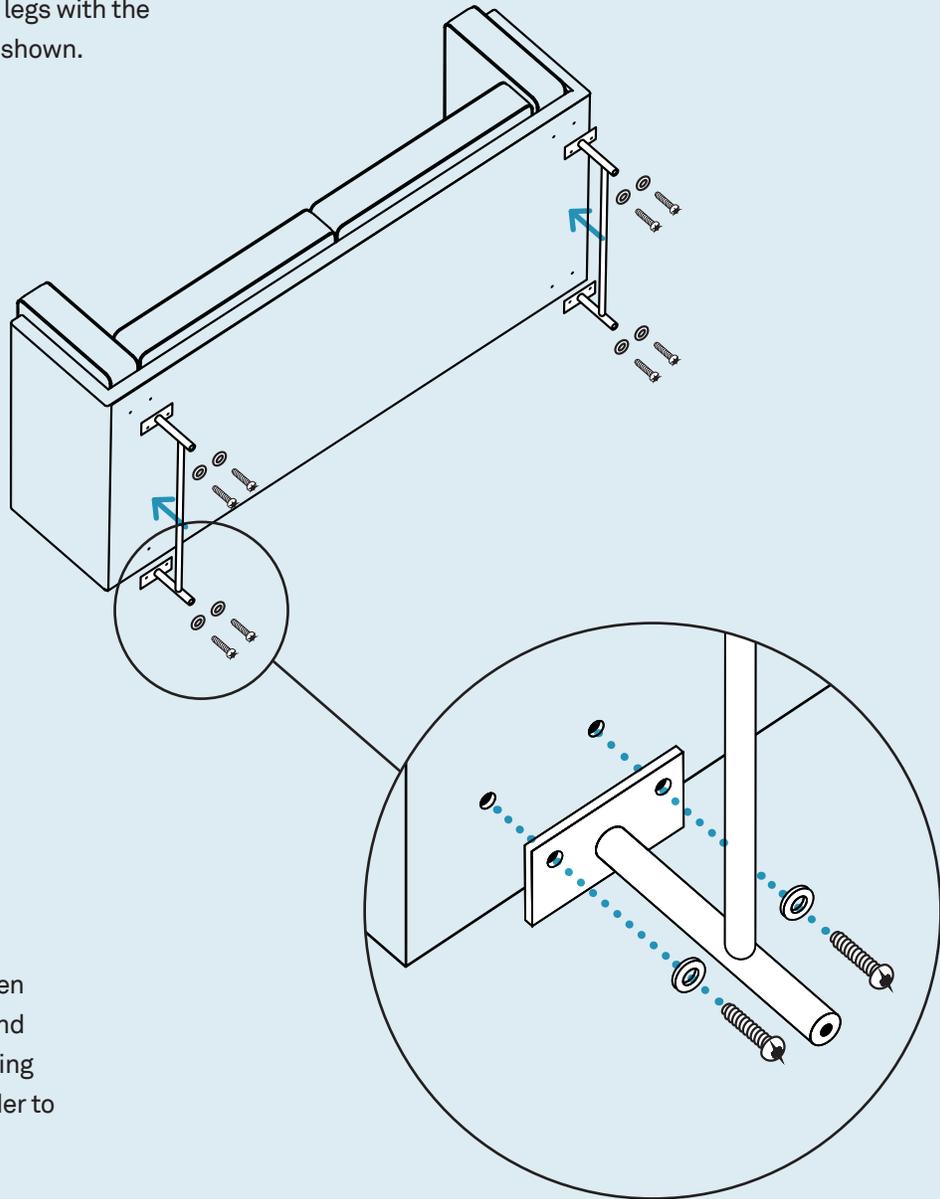

### Precaution:

Once the legs have been attached, have a second person help lift and bring the case upright in order to prevent leg damage.



Pt. 9002 x 1



Pt. 3007 x 8



Pt. 1103 x 8

## Additional Information

### **CLEAN**

Vacuum your upholstery regularly.

### **SPILLS**

Act quickly with spills. Absorb the spill with a clean white cloth or paper towel. Never rub the surface. Do not use water or other liquids to clean, as they may stain the fabric. Consult a commercial cleaning specialist for removal of stubborn stains.

### **AVOID**

Keep upholstery & felt furniture out of direct sunlight and away from heat sources; excessive exposure to sunlight may fade the color of the upholstery. Avoid placing heavy or sharp objects on the furniture surface for long periods of time; this can cause permanent indentations in the fabric. For snags in the fabric, tuck loose threads into fabric or carefully push to reverse side. Never pull out or cut off loose threads.

