
NeedWant Long and Low Shelving

DESIGNED IN 2019

ASSEMBLY NOTES | REV 00

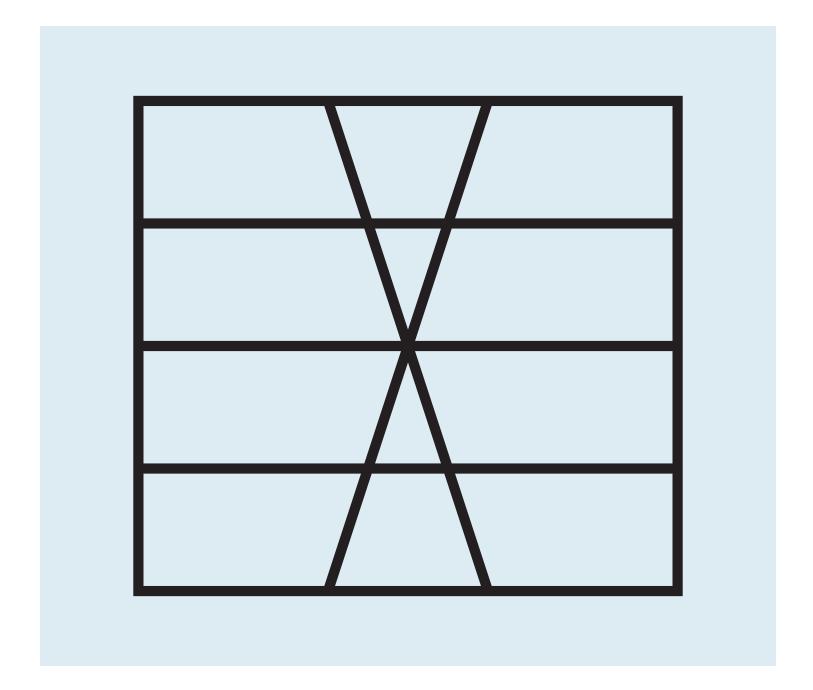




HAVE IT ALL?

Can things really make us happy? Well, there is no better way to test the theory than with this powder coated steel architectural wonder.

NEED A HAND?


Contact us at **service@bludot.com** or **844.425.8368** for assistance.

Parts & Hardware QTY 12 QTY QTY PT. 1108 PT. 1107 PT. 4022 QTY QTY 1 QTY 2 PT. 9032 PT. 9016 Side Frame QTY QTY QTY Shelf 3 Shelf 2 Shelf 1

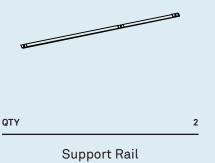

START ASSEMBLY.


Start assembly by threading bolt onto side frame by hand. Do not fully tighten.

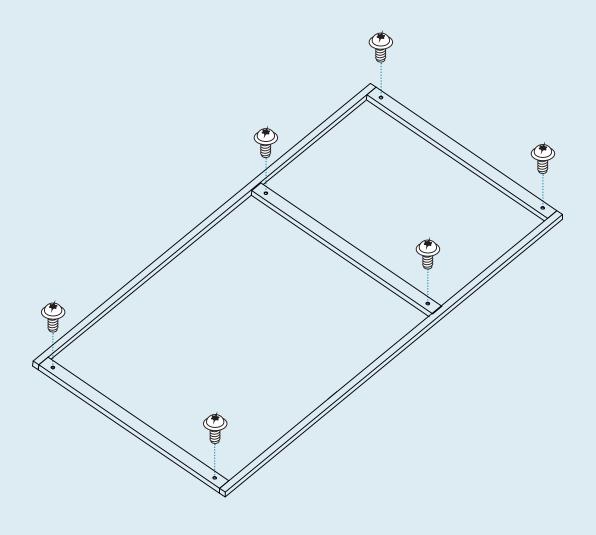




ASSEMBLY NOTES SERVICE@BLUDOT.COM | 2

INSTALL SHELF 1.

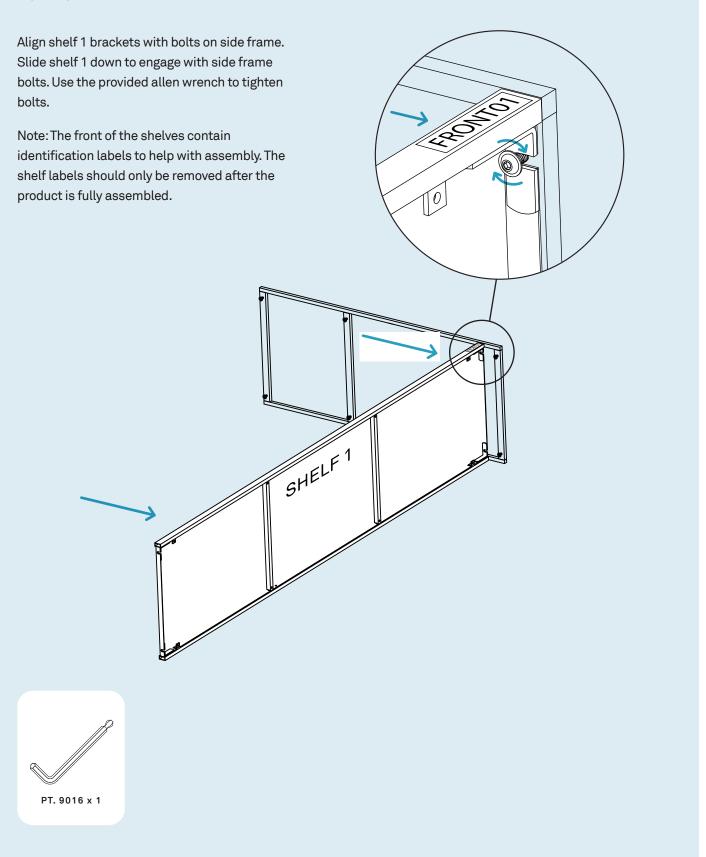

ATTACH REMAINING SHELVES.

Repeat Step 02 assembly for the remaining shelves. Ensure that the shelves are in the correct location and orientation as shown below.

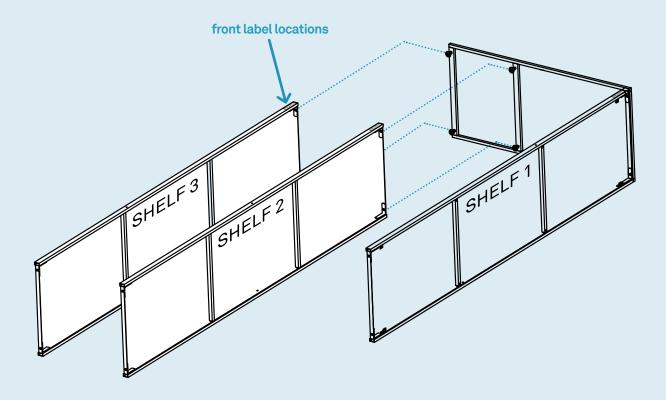





ASSEMBLY NOTES SERVICE@BLUDOT.COM | 4

ATTACH REMAINING SIDE FRAME.

Use the provided hardware to attach the remaining side frame.

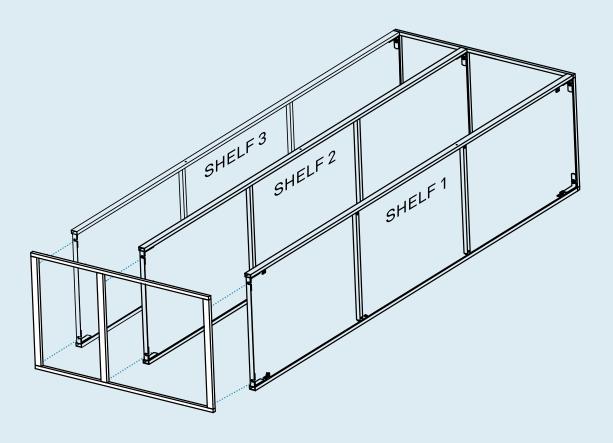


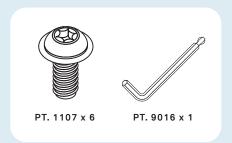


ATTACH SUPPORT RAIL.

Align support rail notches with shelf rails to match the below image. Attach the support rail using the provided hardware.

Once the support rail is attached, thread provided adjustable feet to bottom shelf as shown.

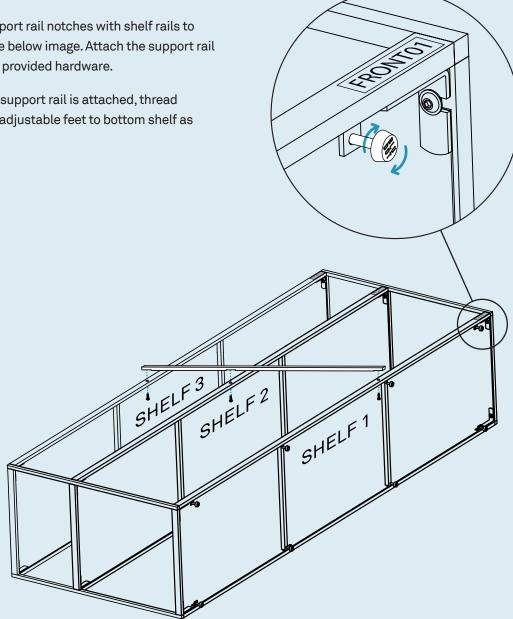


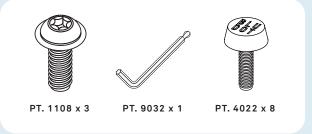

ASSEMBLY NOTES SERVICE@BLUDOT.COM | 6

ATTACH REMAINING SUPPORT RAIL.

Use packaging materials to raise shelving off floor. Align support rail notches with shelf rails to match the below image. Attach the support rail using the provided hardware.

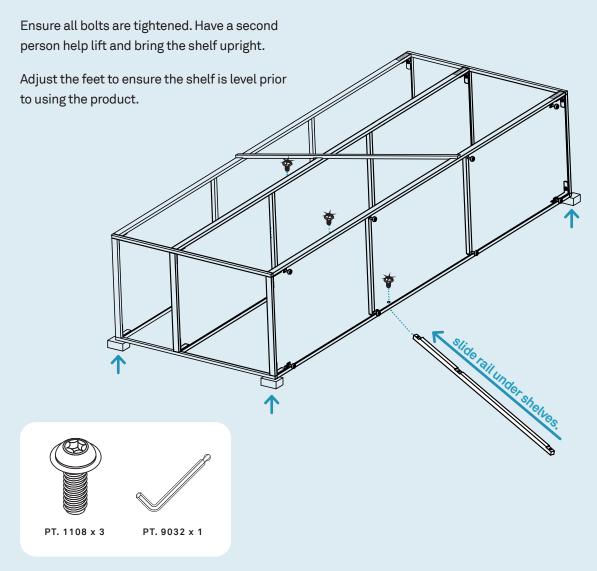

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for painted metal furniture. Wipe completely dry with a soft cloth.

