
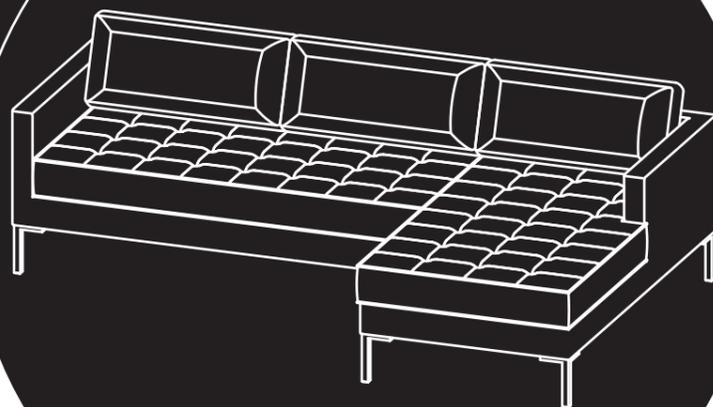


BLU
DOT

PARAMOUNT SECTIONAL

ASSEMBLY NOTES

MODERN
CONNECTIONS
MADE EASY!

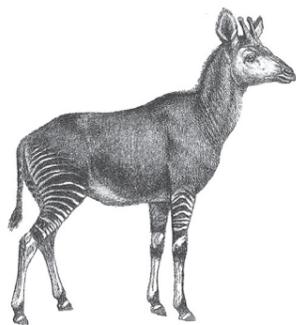

1


Position feet
just behind piping
on underside of
sofa frame.

x16
1204

Repeat foot
installation for
additional
connecting sofas


PARTS

x4



Foot

x2

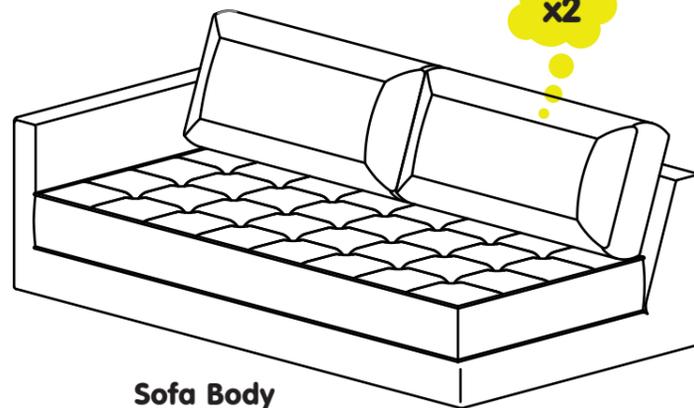


Sofa Body

HARDWARE


Small

x1
8034

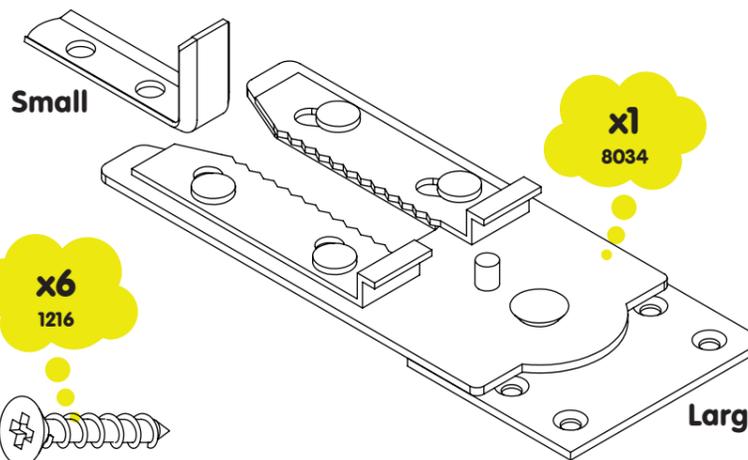

Large


x16
1204




x6
1216




2

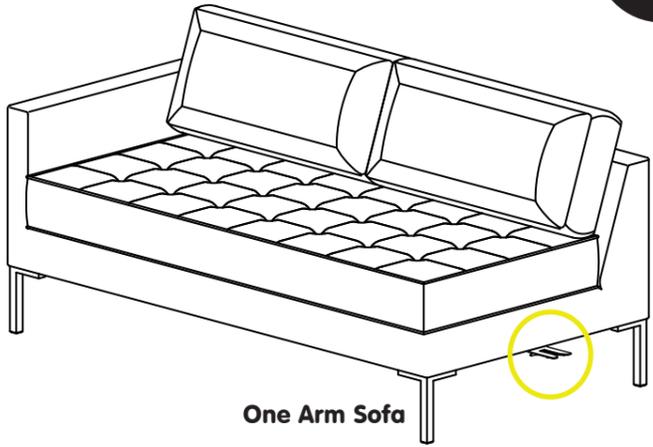

One Arm Sofa

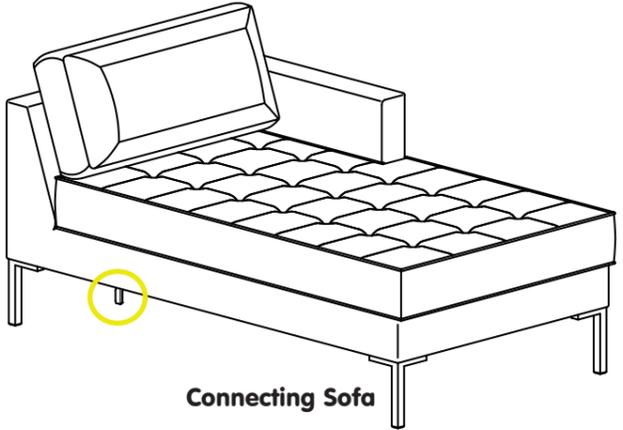


Connecting Sofa

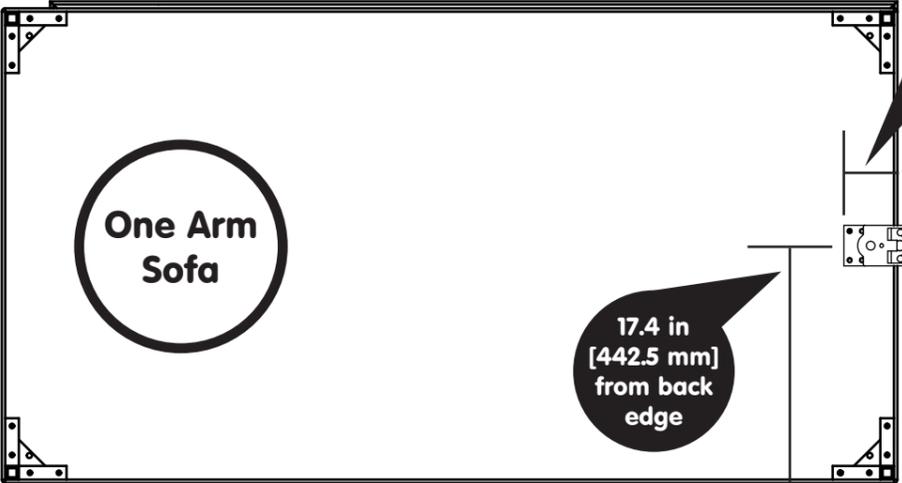

2.8 in [72 mm] from armless edge


17.4 in [442.5 mm] from back edge

lg. sectional connector

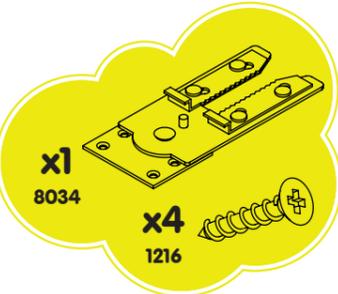

x1 8034

x4 1216

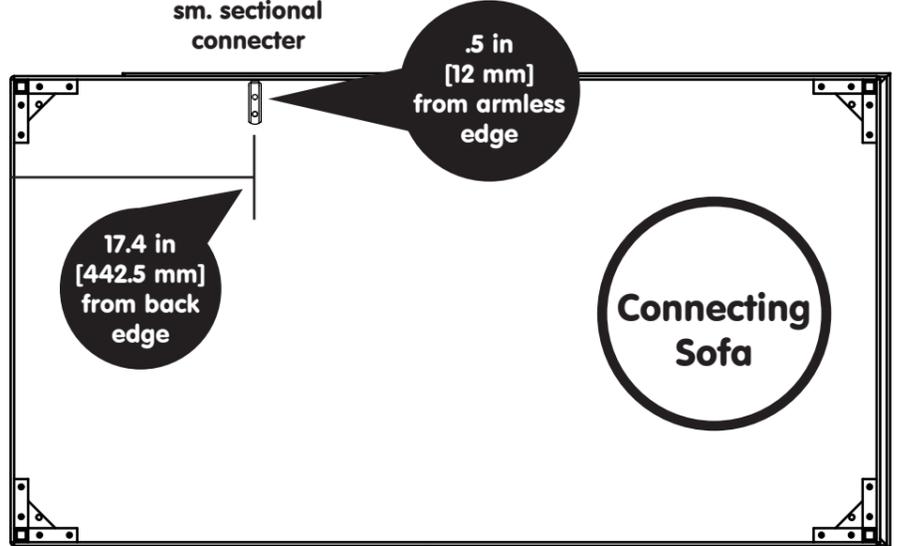


sm. sectional connector

.5 in [12 mm] from armless edge

17.4 in [442.5 mm] from back edge



Connecting Sofa

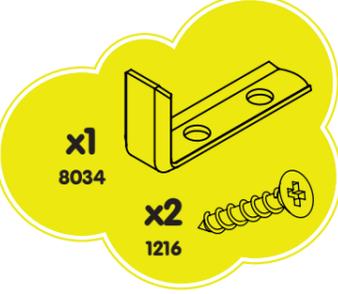

x1 8034

x2 1216

3

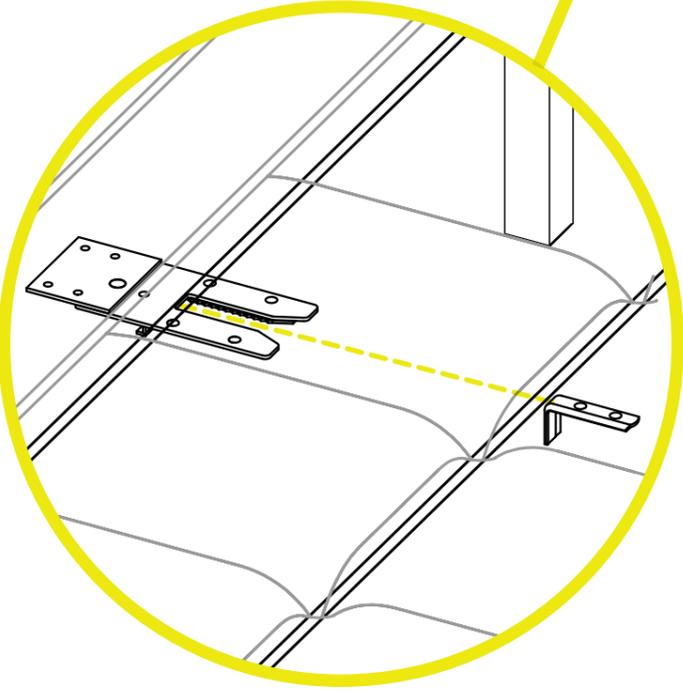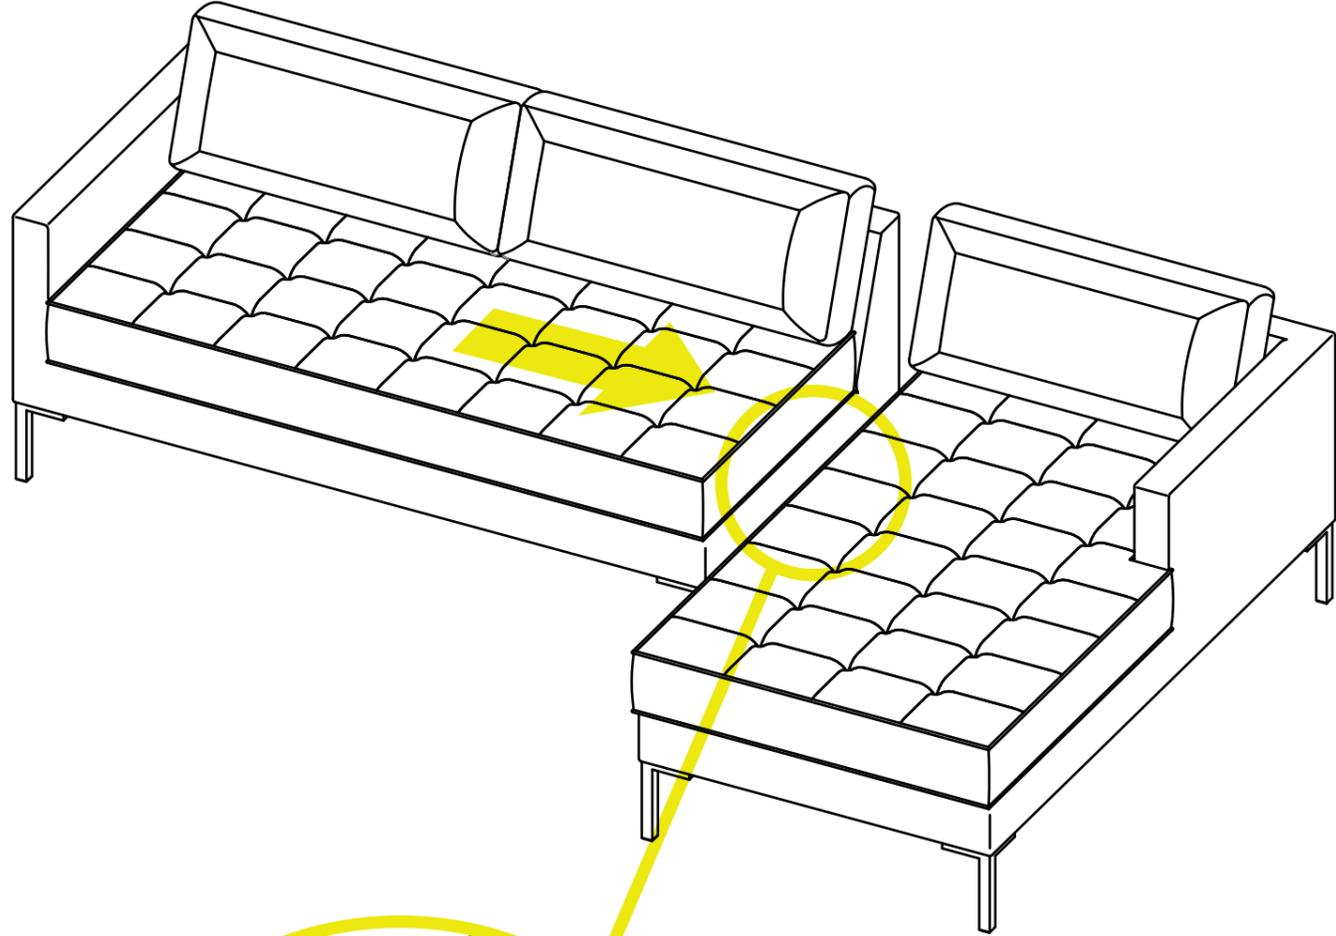

With back sides aligned, carefully slide One Armed Sofa against Connecting Sofa. Make sure sectional connector latches for a secure placement.



PARAMOUNT

UPHOLSTERY CARE

KEEP IT CLEAN,
JIMMY!

CLEAN

Vacuum your upholstery regularly.

SPILLS

Act quickly with spills. Absorb the spill with a clean white cloth or paper towel. Never rub the surface. Do not use water or other liquids to clean, as they may stain the fabric. Consult a commercial cleaning specialist for removal of stubborn stains.

AVOID

Keep upholstery & felt furniture out of direct sunlight and away from heat sources; excessive exposure to sunlight will fade the color of the upholstery. Avoid placing heavy or sharp objects on the furniture surface for long periods of time; this can cause permanent indentations in the fabric. For snags in the fabric, tuck loose threads into fabric or carefully push to reverse side. Never pull out or cut off loose threads.