




Step 02

ATTACHING THE LOWER LEG FRAME.


Attach the lower leg frame as shown using the provided hardware.

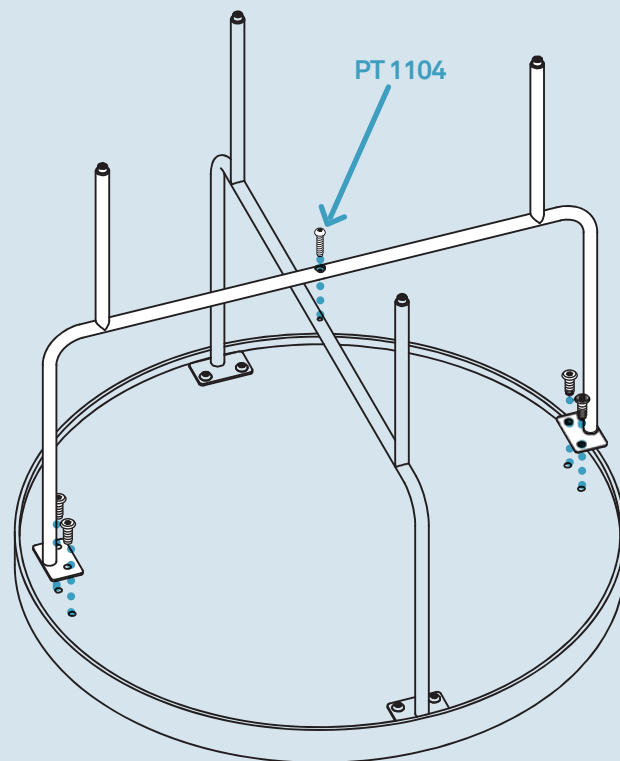


PT. 1083 x 4

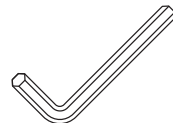

PT. 9022 x 1



PT. 1104 x 1

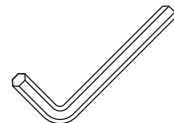

PT. 9013 x 1

Additional Information



CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulate for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

Roundhouse Table Collection

DESIGNED IN 2018

ASSEMBLY NOTES | REV 03

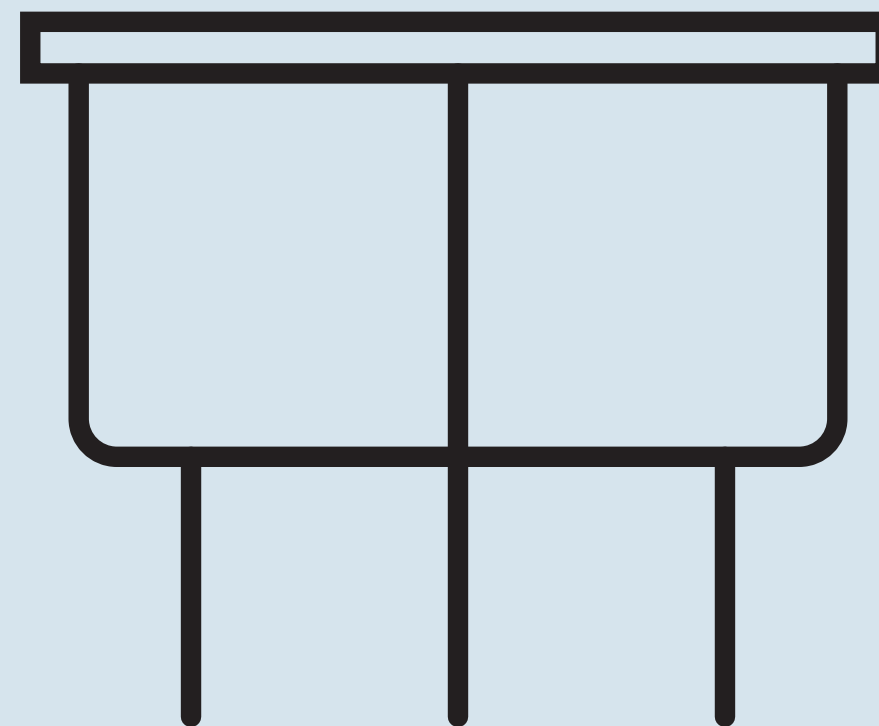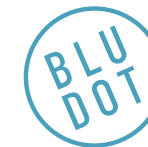

SHATTER THE STATUS QUO OR JUST HAVE A PLACE TO SET YOUR DRINK DOWN.


Wood on top. Wire on the bottom. Functional eye pleasing magic everywhere. Three finishes and a kicky take on simplicity to boot.

NEED A HAND?


Contact us at service@bludot.com or **844.425.8368** for assistance.




Parts & Hardware




QTY 1
Pt. 1104

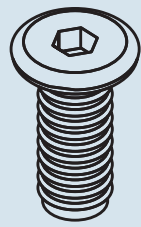


QTY 8
Pt. 1083

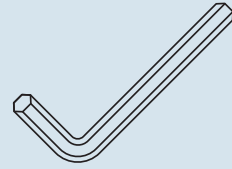


QTY 1
Pt. 9013

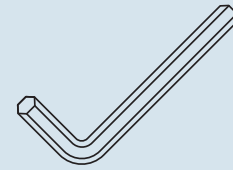

QTY 1
Pt. 9022

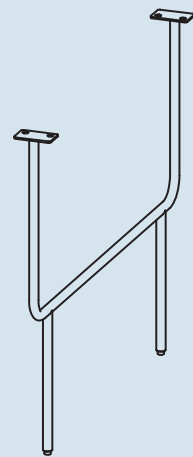


QTY 1
Upper Leg Frame

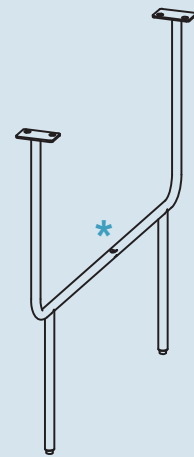

QTY 1
Lower Leg Frame

*clearance hole through tube


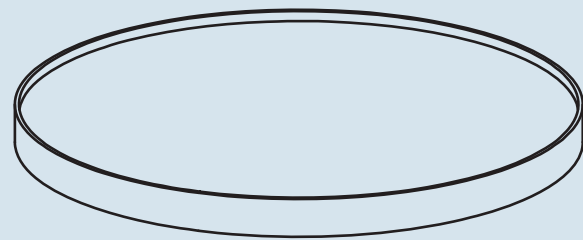


QTY 1
Top Panel


Step 01

ATTACHING THE UPPER LEG FRAME.

Place the top panel face down on a soft surface. Attach the upper leg frame as shown using the provided hardware.

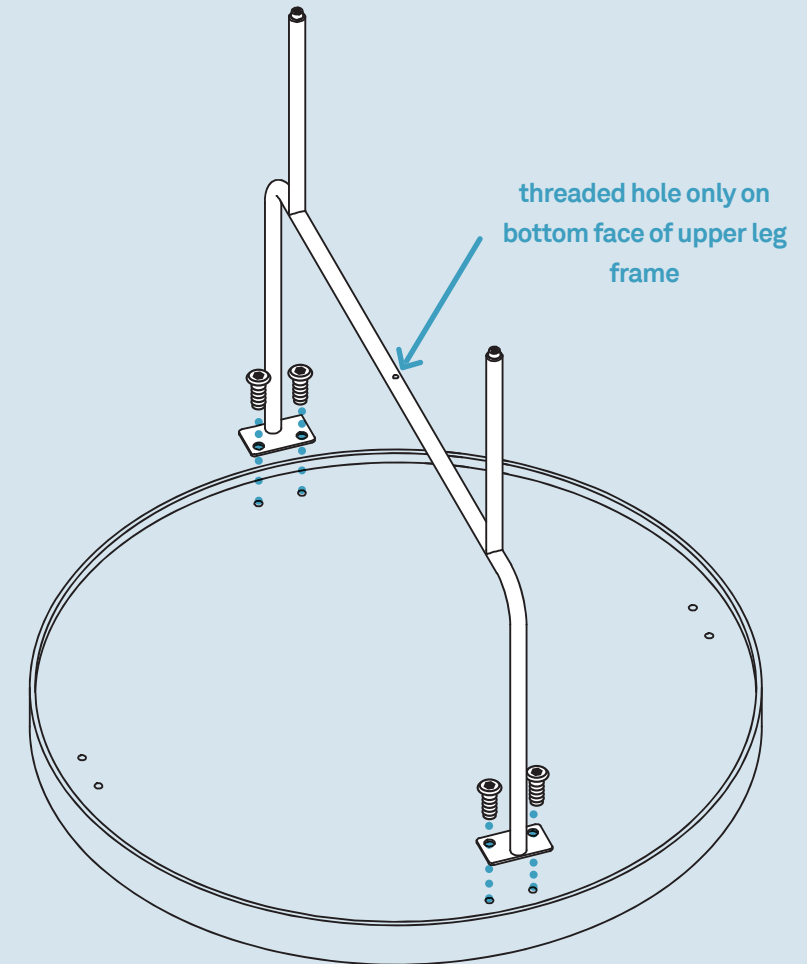

PT. 1083 x 4

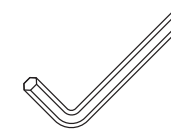

PT. 9022 x 1