


BLU
DOT

STRUT IN WOOD ASSEMBLY NOTES

FOUR.
SQUARE.

CARE


Clean with a soft cloth or sponge using a mild detergent, such as dish soap, and warm water. Wipe completely dry with a soft cloth.

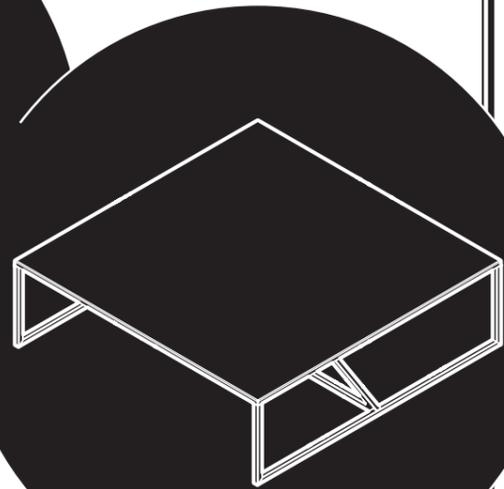

1

Assemble on carpet or protective mat

x8
1214

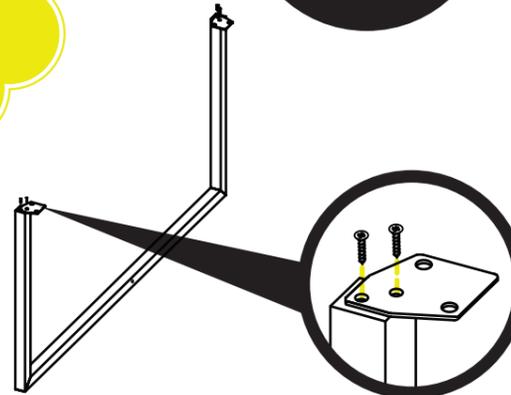

2


Partially tighten bolts.

x1
9017

x2
1214

x2
1074

x2
3009

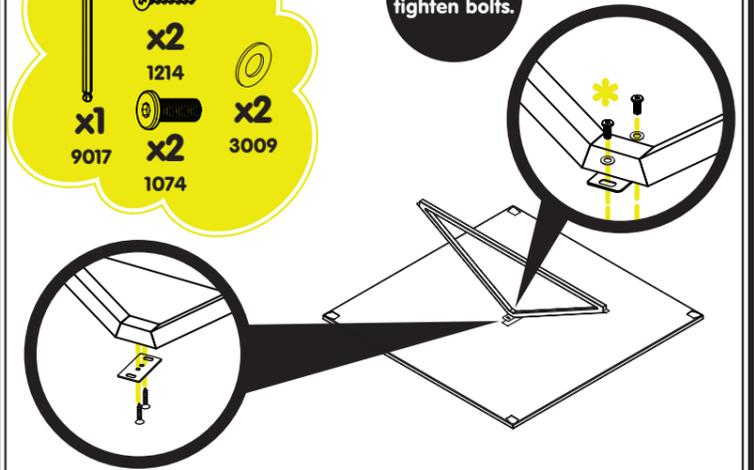

3

START HERE


x1
9017

x2
1615

x8
1074

x8
3009

Press parts together firmly.

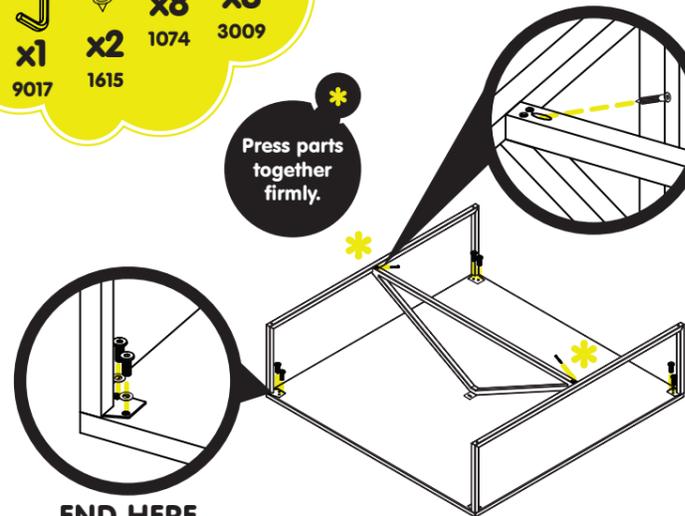


END HERE

4

Finish tightening all bolts before using product.

x4
4003

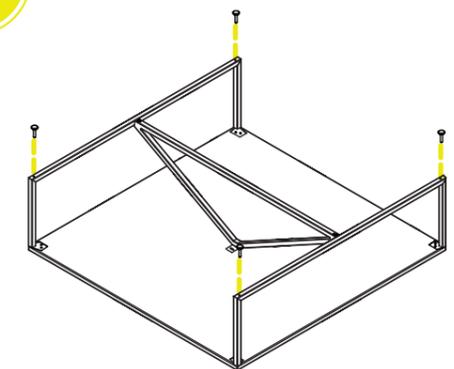

PARTS


x4



x1




x2

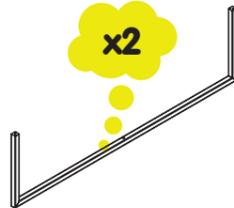

x1



x1

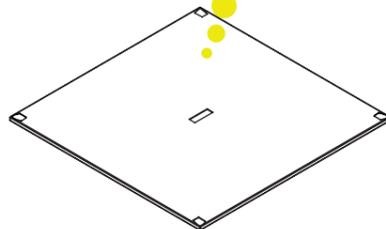

HARDWARE

x10
3009



x10
1214



x10
1074



x2
1615



x4
4003



x1
9017

