



Swole Wood Table

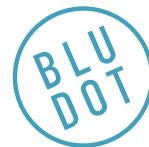

DESIGNED IN 2021

ASSEMBLY NOTES | REV 01

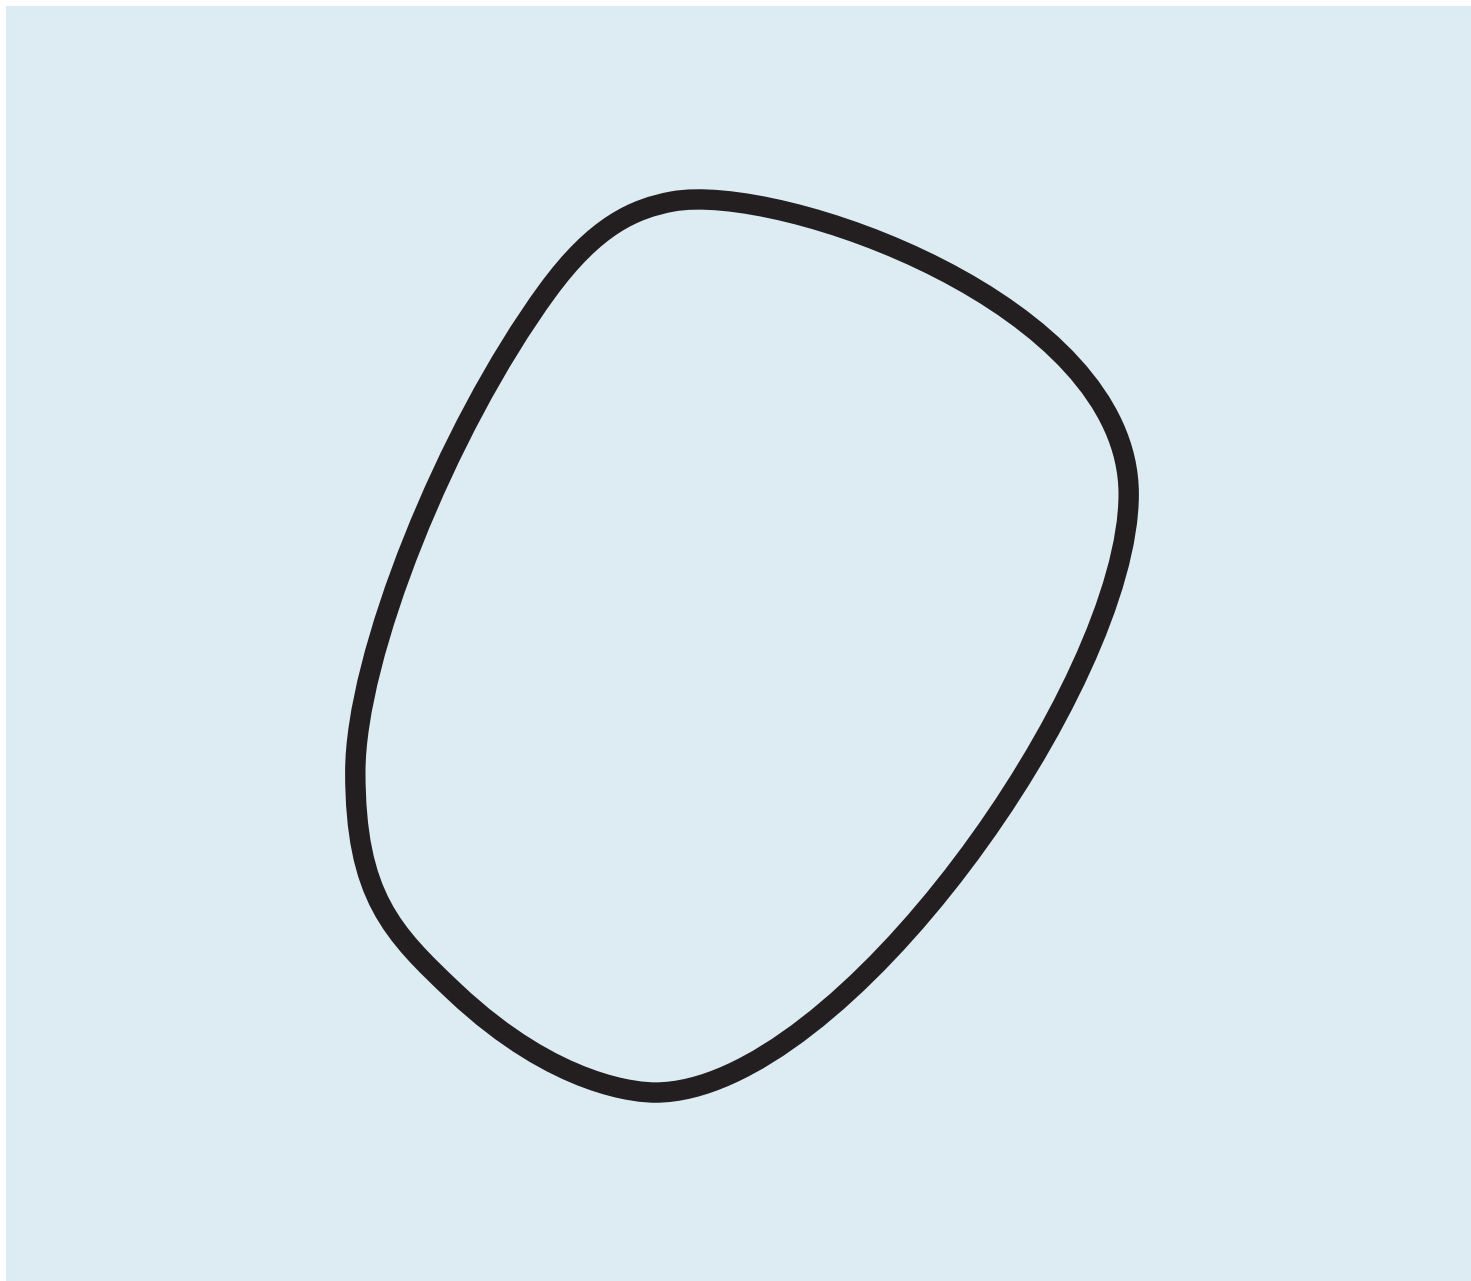

GET FREAKY.

Always at the ready, this sturdy steel table's cantilevered base makes it a cinch to pull up and tuck under a sofa, lounge or bed.

NEED A HAND?


Contact us at service@bludot.com or **844.425.8368** for assistance.

Parts & Hardware




QTY 2

Pt. 1078




QTY 3

Pt. 1002

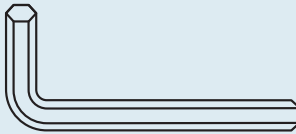


QTY 1

Pt. 9026

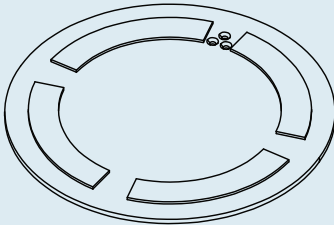


QTY 1

Base

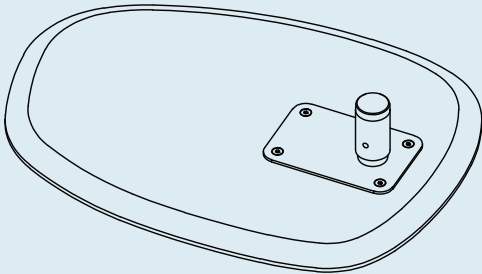

QTY 1

Top




QTY 1

Support

Step 01

ATTACHING THE SUPPORT.

Place the top panel face down on a soft surface. Align the hole pattern with the callout as shown. Attach using the provided hardware.

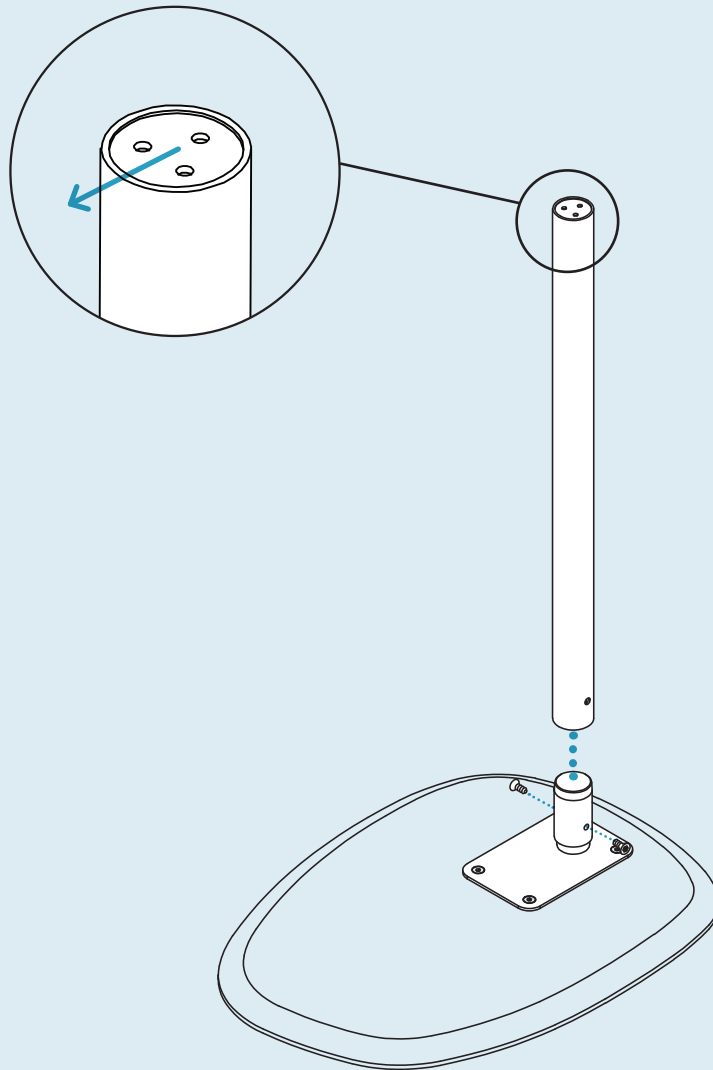

PT. 1078 x 2





PT. 9026 x 1


Step 02

ATTACHING THE BASE.

Align the base as shown. Attach the base using the provided hardware.

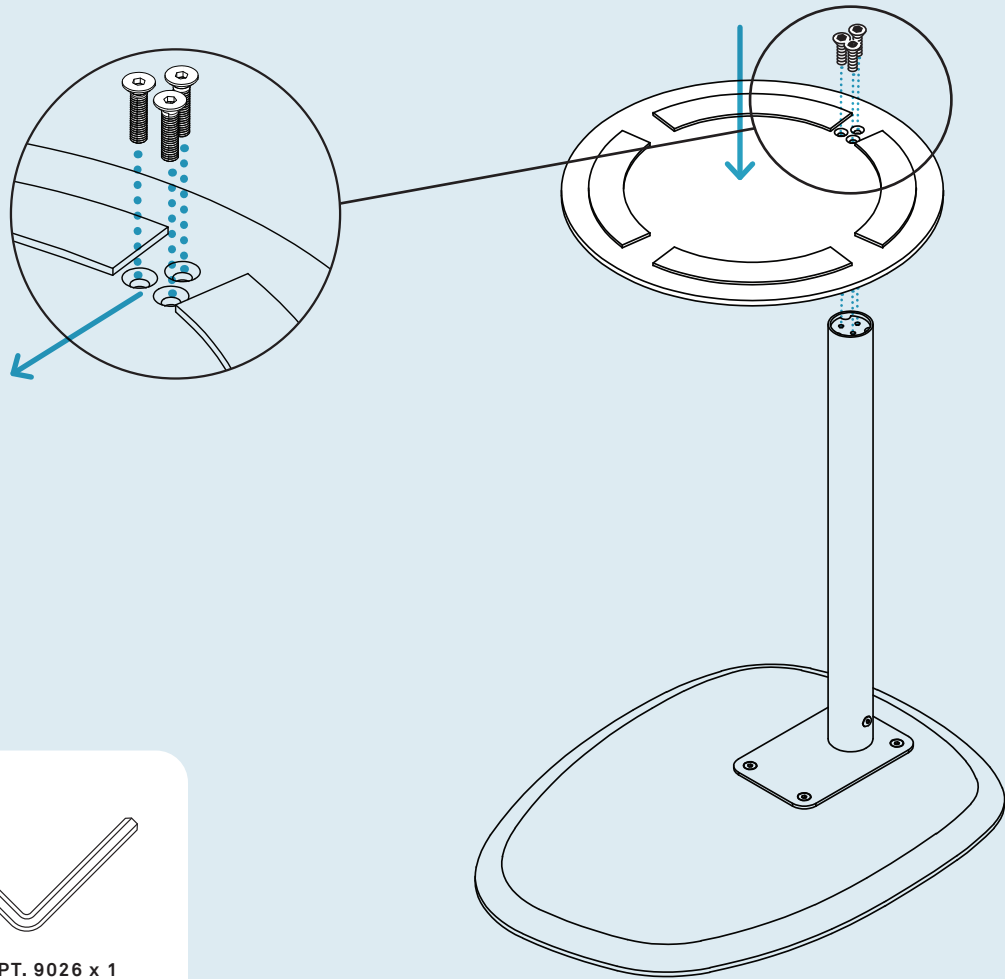

PT. 1002 x 3

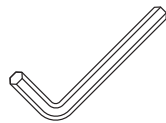

PT. 9026 x 1

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner approved for use on painted metal and wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

