


# Tabloid Desk

DESIGNED IN 2020

ASSEMBLY NOTES | REV 00

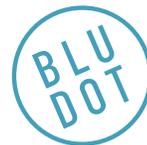

NEED A HAND?

Contact us at [service@bludot.com](mailto:service@bludot.com) or  
**844.425.8368** for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow  
along on Instagram for some sneak peeks into the process.

# Parts & Hardware




QTY 2

Pt. 1217




QTY 2

Pt. 1218

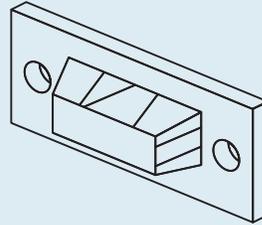


QTY 2

Pt. 8041

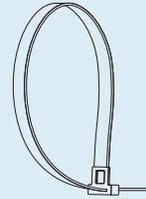


QTY 1

Pt. 1604



QTY 2

Pt. 8054



QTY 4

Pt. 1603



QTY 4

Pt. 1613




QTY 4

Pt. 5016




QTY 1

Pt. 9018

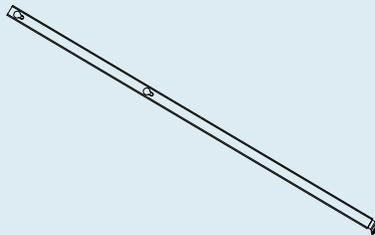


QTY 2

Short Front Leg

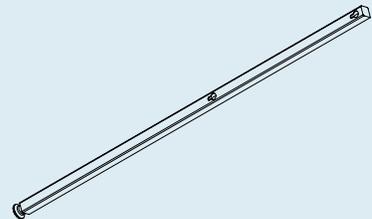

QTY 2

Tall Rear Leg

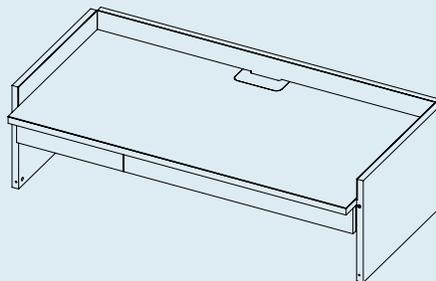

QTY 1


Desk

# Step 01


## INSTALLING THE HARDWARE.

Place the top of the desk assembly face down on a soft surface as shown. Loosely attach the provided hardware. Be sure to leave 1/4" of threading exposed to perform the next step. Install bolts on all four corners of the desk.


Use Pt. 1613 Here  
For All Four Corners

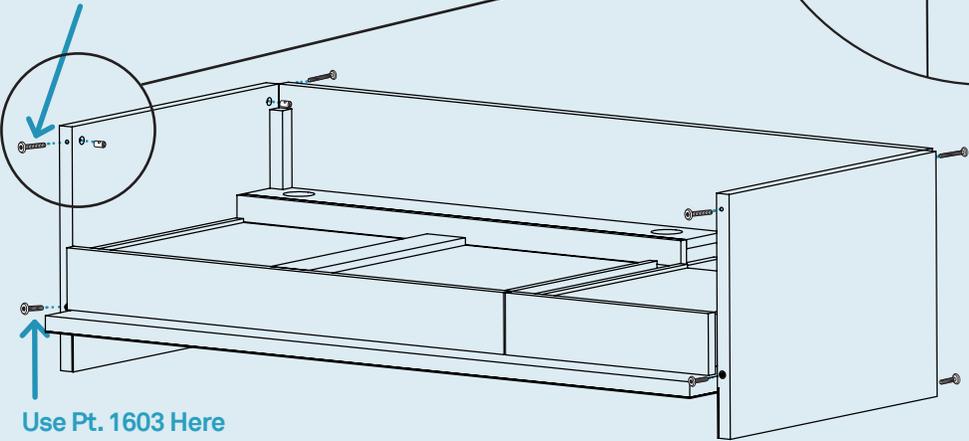

Use Pt. 1603 Here  
For All Four Corners

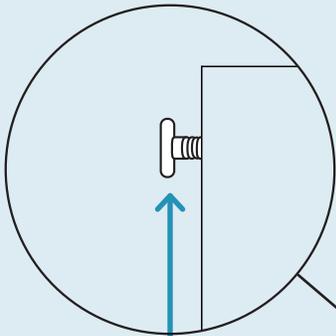

Leave 1/4" of  
Threading Exposed

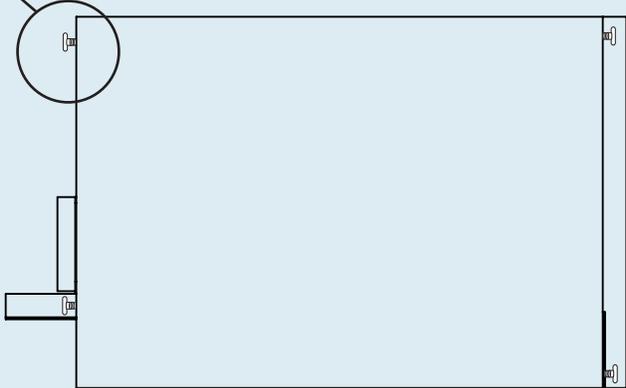


PT. 1613 X 4



PT. 1603 X 4



PT. 5016 X 4





PT. 9018 X 1

# Step 02

## ATTACHING THE LEGS.

Attach the leg by threading the bolts through each keyhole slot and sliding it into place. Tighten the bolts from the front of the leg using the provided hardware. Tighten bolts on all four corners of the desk.

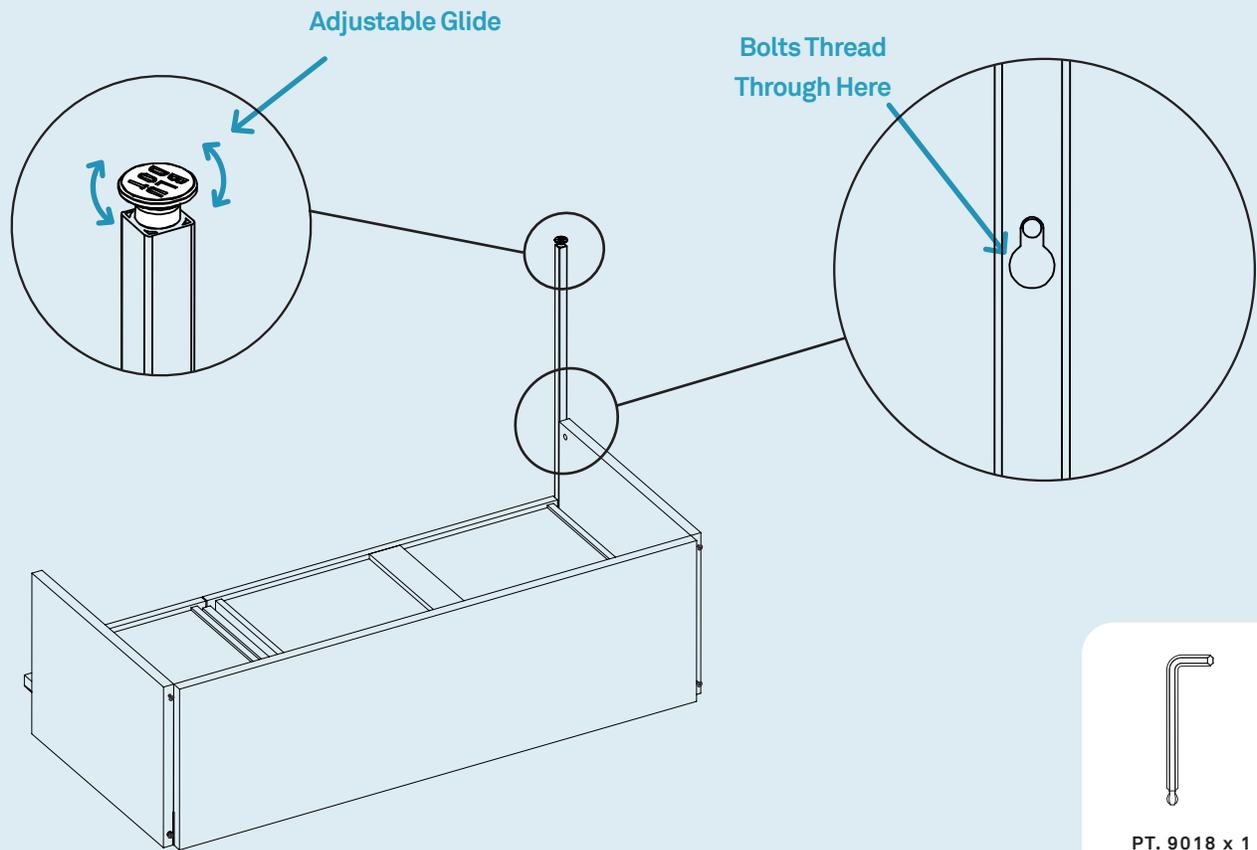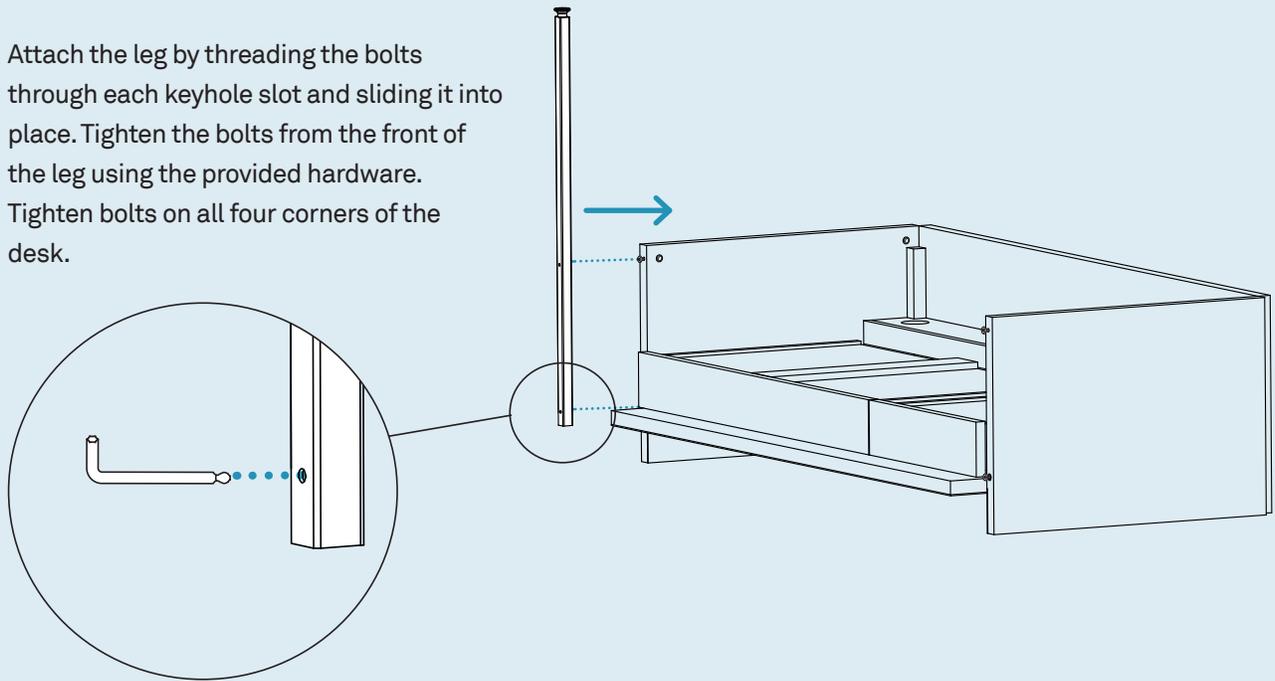


# Step 03


## ATTACH ANTI-TIP BRACKET TO DESK.

Brackets must be installed to the back panel of the desk. In order to prevent damage, it is recommended that  $3/32$ " pilot holes be drilled prior to installation.

**Note:** Ensure that the depth of the pilot hole does not exceed  $1/2$ ". A deeper hole may be visible on the opposite side.

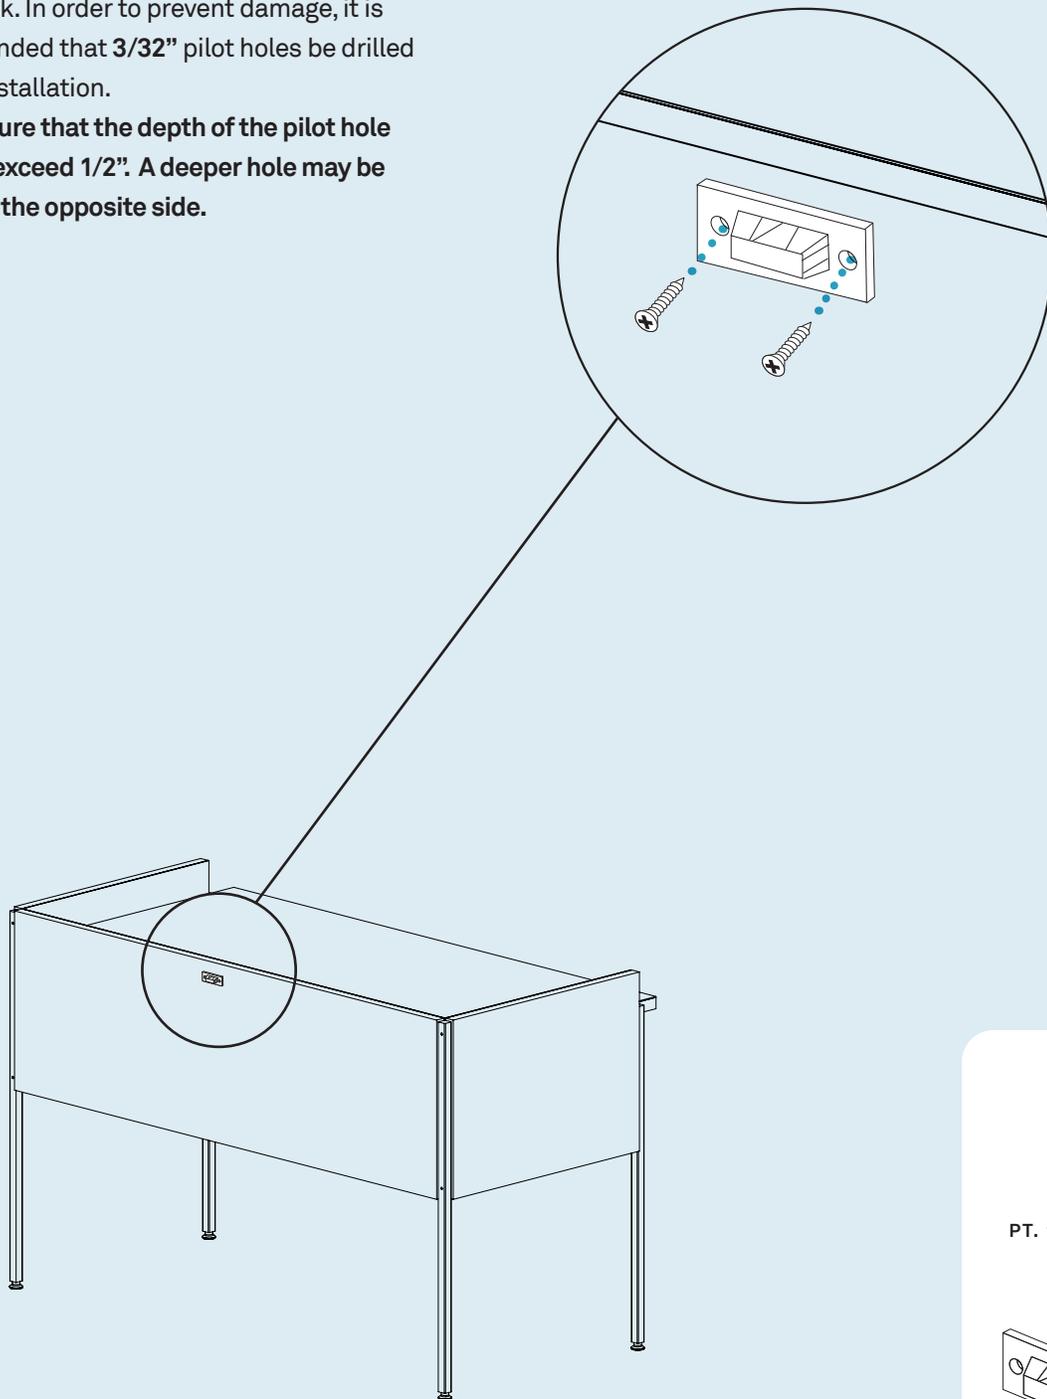

PT. 1217 X 2



PT. 8014 X 1


## Step 04

### ATTACH ANTI-TIP BRACKET TO WALL.


Wall anchors and fasteners are included for installation into drywall. Please consult your local hardware professional to determine the hardware best suited for your wall type.

If the mounting locations are positioned on a stud, the installation of wall anchors may be skipped. Instead, drill  $7/64$ " pilot holes in the marked positions and install anti-tip bracket with provided hardware as shown.

If the mounting locations are not positioned on a stud, drill  $15/64$ " holes into the marked locations and press wall anchors into the drilled holes and install anti-tip bracket with provided hardware as shown.

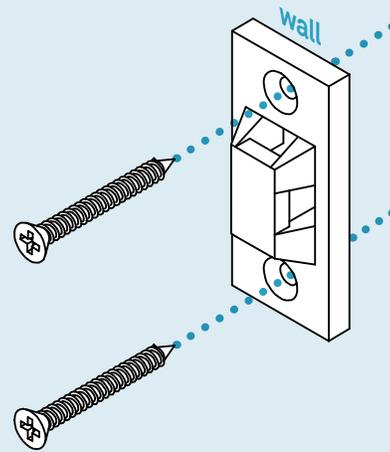


OR

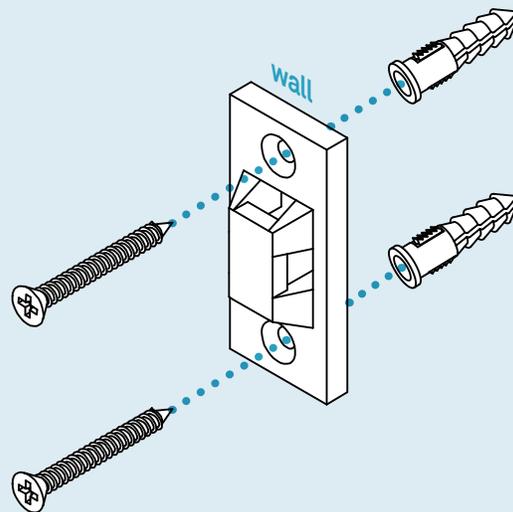

PT. 8054 x 2



PT. 1218 x 2

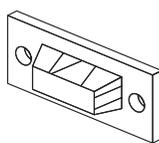


PT. 8041 x 1

# Step 05

## SECURE DESK.

Install and tighten wall strap prior to using the product.

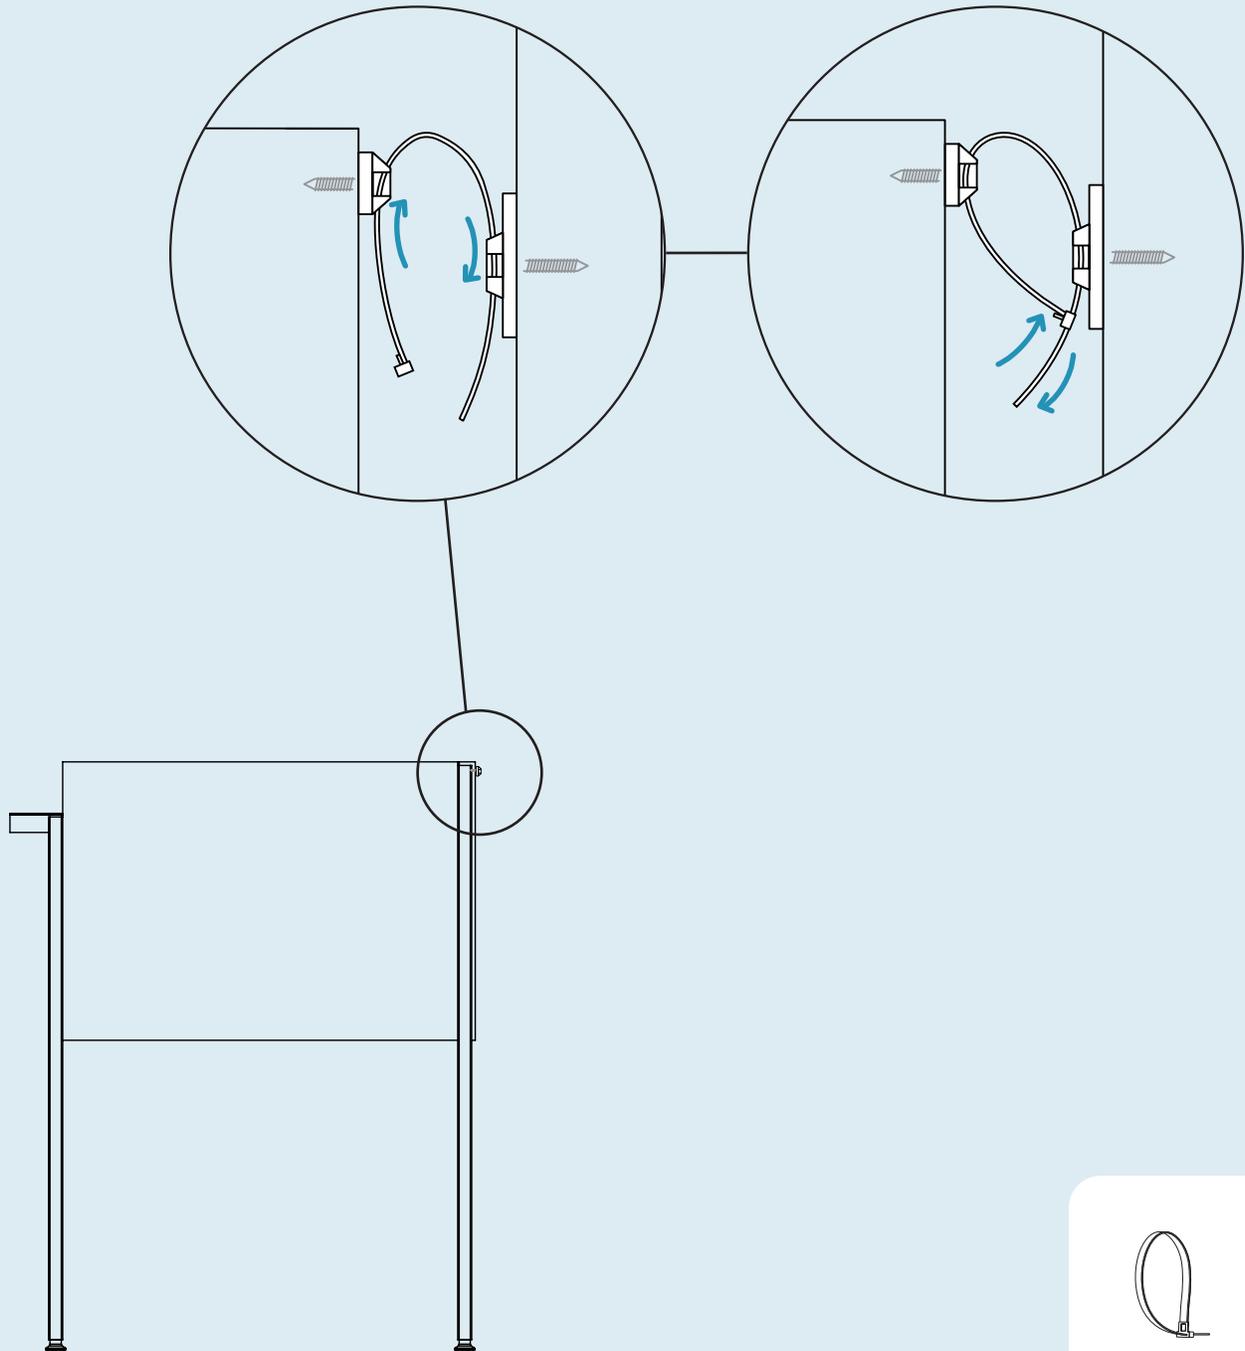

## Additional Information

### CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

